


# Instruction

## Replacement of EPROM


Wind Display LED 4.3251.00.000

 **Attention:** *The instrument must be mounted and wired only by a qualified expert, who knows and observes the generalities of technics, and applicable regulations and norms.*

1. Unplug all connectors on the back plate.
2. Remove the screws on the back plate.



3. Remove the PCB on the right side by lifting it to get free space for your fingers.

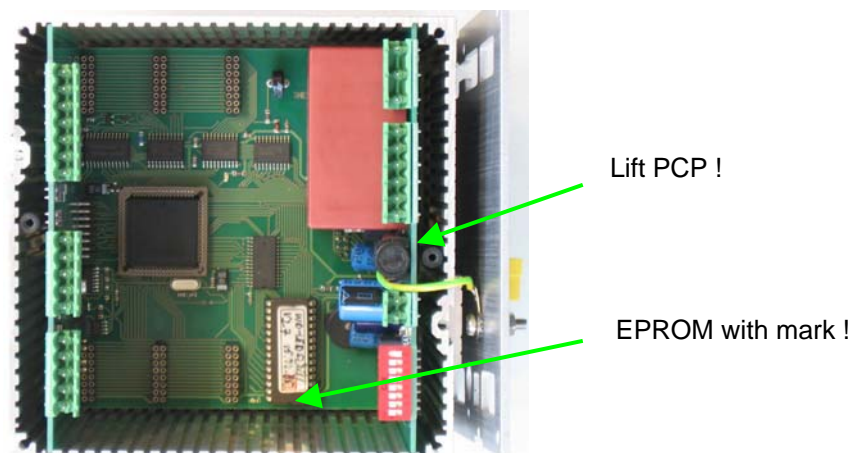

4. Remove the existing EPROM carefully with an applicable tool (detaching device, screwdriver or something similar).
5. Insert the new EPROM into the empty holder:
  - Please pay attention to the bottom position of the EPROM (see drawing above).
  - After this, please make sure that all 28 pins of the EPROM are inside the holder.
6. Mount the PCB paying attention to plug its connector.
7. Mount the back plate and apply the screws.



## **ADOLF THIES GmbH & Co. KG**

Hauptstraße 76      37083 Göttingen Germany  
P.O. Box 3536 + 3541      37025 Göttingen  
Phone ++551 79001-0      Fax ++551 79001-65  
www.thiesclima.com      info@thiesclima.com



- Alterations reserved -