

Instructions for Use

021690/11/13

CLIMA SENSOR US

4.920x.00.00x

Software version V2.4 or higher Status: 11/2013



ADOLF THIES GmbH & Co. KG

Hauptstraße 76
Postfach 3536 + 3541
Tel. +49 551 79001-0
www.thiesclima.com

37083 Göttingen Germany
37025 Göttingen
Fax +49 551 79001-65
info@thiesclima.com

Safety Instructions

- Before operating with or at the device/product, read through the operating instructions. This manual contains instructions which should be followed on mounting, start-up, and operation. A non-observance might cause:
 - Failure of important functions
 - Endangering of persons by electrical or mechanical effect
 - Damage to objects
- Mounting, electrical connection and wiring of the device/product must be carried out only by a qualified technician who is familiar with and observes the engineering regulations, provisions and standards applicable in each case.
- Repairs and maintenance may only be carried out by trained staff or **Adolf Thies GmbH & Co. KG**. Only components and spare parts supplied and/or recommended by **Adolf Thies GmbH & Co. KG** should be used for repairs.
- Electrical devices/products must be mounted and wired only in voltage-free state.
- **Adolf Thies GmbH & Co KG** guarantees proper functioning of the device/products provided that no modifications have been made to the mechanics, electronics or software, and that the following points are observed:
- All information, warnings and instructions for use included in these operating instructions must be taken into account and observed as this is essential to ensure trouble-free operation and a safe condition of the measuring system / device / product.
- The device / product is designed for a specific application as described in these operating instructions.
- The device / product should be operated with the accessories and consumables supplied and/or recommended by **Adolf Thies GmbH & Co KG**.
- Recommendation: As it is possible that each measuring system / device / product under certain conditions, and in rare cases, may also output incorrect measuring values, it is recommended using redundant systems with plausibility checks with **security-relevant applications**.

Environment

- As a longstanding manufacturer of sensors Adolf Thies GmbH & Co KG is committed to the objectives of environmental protection and is therefore willing to take back all supplied products governed by the provisions of "ElektroG" (German Electrical and Electronic Equipment Act) and to perform environmentally compatible disposal and recycling. We are prepared to take back all Thies products concerned free of charge if returned to Thies by our customers carriage-paid.
- Make sure you retain packaging for storage or transport of products. Should packaging however no longer be required, arrange for recycling as the packaging materials are designed to be recycled.



Documentation

- © Copyright **Adolf Thies GmbH & Co KG**, Göttingen / Germany
- Although this operating instruction has been drawn up with due care, **Adolf Thies GmbH & Co KG** can accept no liability whatsoever for any technical and typographical errors or omissions in this document that might remain.
- We can accept no liability whatsoever for any losses arising from the information contained in this document.
- Subject to modification in terms of content.
- The device / product should not be passed on without the/these operating instructions.

Patent protection

This device is protected by the patents:

Patent No.: EP 1 448 966 B1

Patent No.: US 7,149,151 B2

Instructions for use

These instructions for use describe all application and adjustment options for the device.

These detailed instructions allow users to modify the factory settings to their needs via the serial interface of the CLIMA SENSOR US.

Scope of supply

1 x CLIMA SENSOR US

1 x CD THIES DEVICE UTILITY 9.1700.81.000

1 x Copy of short instructions for uses

1 x Instructions for uses (on CD)

1 x Supplementary sheet with the factory settings.

Contents

1	Model	7
2	Application	8
3	Mode of operation	10
3.1	Wind measurement:	10
3.1.1	Measuring principle: Wind speed and direction	10
3.1.2	Measuring principle: Acoustic virtual temperature	11
3.2	Temperature and humidity measurement:	12
3.3	Air pressure:	12
3.4	Brightness:	12
3.5	Precipitation:	12
3.5.1	Measuring principle: Precipitation:	12
3.5.2	Type of precipitation (Synop Code):	13
4	Installation of CLIMA SENSOR US	14
4.1	Selection of installation site	14
4.2	Mechanical installation	14
4.2.1	Alignment to north	15
4.3	Electrical installation	15
4.3.1	Cable, cable preparation, connector installation	15
4.3.2	Connection diagram for 16-core cable (function example)	17
4.3.3	Connection with optional 16-core cable 509311	17
4.3.4	Connection diagram for 8-core cable (function example)	18
4.3.5	Connection with optional 8-core cable 509427	18
5	Servicing	19
5.1	Calibration	19
5.2	Warranty	19
6	Functional description	20
6.1	Command interpreter THIES ASCII format	20
6.1.1	Duplex mode	20
6.1.2	Delayed response	21
6.1.3	General telegram structure	21
6.1.4	Storage of CLIMA SENSOR US parameters	22
6.1.5	Return values of CLIMA SENSOR US	22
6.1.6	Access mode	23
6.1.7	Baud rate	24
6.1.8	Device ID	25
6.1.9	Bus mode	25
6.2	Command interpreter MODBUS RTU	26
6.2.1	Measured values (input register)	27
6.2.2	Commands (holding register)	33

6.2.3	Commands and descriptions	33
6.2.4	Sensor Status	34
6.3	Analogue outputs	35
6.3.1	North correction	35
6.4	Instantaneous values and output of raw measured values	36
6.4.1	Averaging	36
6.5	Serial data output	37
6.5.1	Data request	37
6.5.2	Autonomous telegram output.....	37
6.5.3	Fixed telegram formats	38
6.5.4	Generation of check sum	38
6.6	Device behaviour under extreme measuring conditions	39
6.6.1	Occurrence of errors:	39
6.6.2	Behaviour of analogue outputs	39
6.6.3	Behaviour of telegram output.....	39
6.7	Output of all system parameters	39
6.8	Query software version	39
6.9	Force restart	39
6.10	Plausibility	40
6.11	Online Help	40
7	Configuration of CLIMA SENSOR US by customer	41
8	List of commands.....	42
9	Commands and descriptions	43
10	Appendix 1 Predefined data telegrams	59
10.1	Telegram 1 VDT	59
10.2	Telegram 2 VDTHP	59
10.3	Telegram 3 VDTBDRE	60
10.4	Telegram 4 VDTHPBDRE	60
10.5	Telegram 5 NMEA - WIND	61
10.6	Telegram 6	62
10.7	Telegram 14 Scientific telegram	65
11	Technical data	67
12	Accessories (available as optional features).....	68
13	Dimension drawing	69
14	EC Declaration of Conformity	70

Table

Table 1: Synop Code table	13
Table 2: Restrictions in full and half duplex mode	21
Table 3: Access keys for different command levels	23
Table 4 : MODBUS frame.....	26
Table 5 : MODBUS exceptions.....	26
Table 6 : MODBUS input register	32
Table 7 : List of commands	33
Table 8: Scaling of analogue outputs	35
Table 9: List of predefined data telegrams	38
Table 10: Selection of averaging periods with parameter AV	46
Table 11: List of baud rates with telegram BR	47
Table 12: Conversion factors between different wind speeds.....	55

1 Model

Article No.	Designation	Parameters	Output / Interfaces / Features
4.9200.00.000	CLIMA SENSOR US NHTFB	Wind speed Wind direction Precipitation Brightness Temperature Humidity Pressure	0...10V RS485 / 422 GPS receiver 19-pin plug connection Data protocol, adjusted: - ASCII (Thies-Format)
4.9201.00.000	CLIMA SENSOR US TFB	Wind speed Wind direction Temperature Humidity Pressure	0...10V RS485 / 422 19-pin plug connection Data protocol, adjusted: - ASCII (Thies-Format)
4.9202.00.000	CLIMA SENSOR US NH	Wind speed Wind Direction Precipitation Brightness	0...10V RS485 / 422 GPS receiver 19-pin plug connection Data protocol, adjusted: - ASCII (Thies-Format)
4.9203.00.000	CLIMA SENSOR US WIND	Wind speed Wind direction	0...10V RS485 / 422 19-pin plug connection Data protocol, adjusted: - ASCII (Thies-Format)
4.920X.00.001	CLIMA SENSOR US	As above	As above, however Data protocol, adjusted: - BINARY (Modbus RTU) in half duplex mode

2 Application

The CLIMA SENSOR US is used for acquisition of the most important meteorological parameters. Depending on the development level the device supplies measured data for:

- wind speed and direction
- air temperature
- relative humidity
- barometric air pressure
- precipitation
- brightness

The options for data output are

- analogue, as a standard signal or / and in
- ASCII (THIES format) or

.....- binary (MODBUS RTU protocol).

The compact design, simple mounting and different options for data output permit operation with numerous applications.

The device is particularly suitable for use in the following sectors

- building services management
- traffic control
- meteorology
- Industrie
- Energie Supply
- Environmental monitoring

The **wind speed** and **wind direction** are determined through the acquisition of 2-dimensional horizontal components of ultrasonic measurement paths positioned at right angles in relation to each other. The speed of sound can be additionally used to calculate and output the **acoustic virtual temperature**.

The principle of measuring the ultrasonic propagation time means that the device is ideal for the inertia-free measurement of gusts and peak values.

The **air temperature** and **relative humidity** are measured via a built-in precision combination sensor. It is protected from harmful environmental influences by a micropore filter that is impermeable to water but open to water vapour. The built-in **pressure sensor** based on MEMs (micro-electro-mechanical system) technology is also protected with such a filter.

Measurement of the **precipitation intensity** is contactless using a signal reflected back with a Doppler radar. When calculating this, the intensity captured for the last minute is extrapolated to an output for one hour.

Brightness is captured by 4 photo sensors with spectral sensitivity curve which is ideally suited to the sensitivity of the human eye. The direction of the light source is calculated using the prevailing intensity conditions. The logarithmic intensity characteristic of the photo sensors allows light intensities to be measured and output in a wide range between 1 – 150,000 lux.

A **GPS receiver**, which is built-in with certain models, is used for the determination of position and as a real-time source. This data is additionally used to calculate the current position of the sun. The **position, time and position of the sun** are output via the RS485/422 interfaces.

The analogue and digital interfaces are electrically isolated from the power supply and the housing potential. This means that there is no conductive connection that might result in the output signals being superposed by interference currents or voltages.

Digital output:

A RS485/422 interface is available for serial communication. It can be operated in full or half duplex mode. Predefined data telegrams are available for outputting measured values (e.g. VD, VDT, NMEA, etc.).

A **MODBUS RTU protocol** is additionally implemented for extended standardised communication. The device can be switched to MODBUS-RTU mode with the relevant command.

Analogue outputs:

8 voltage outputs 0..10V are available.

The first 3 outputs are set to:

1. wind speed
2. wind direction
3. temperature

The other 5 voltage outputs are predefined for:

4. relative humidity,
5. air pressure,
6. brightness
7. Brightness direction,
8. precipitation intensity.

Individual output scaling of the measuring ranges is possible; see **Command OL, Output Link**. These outputs are either active or inactive depending on the model.

Serial and analogue output of the data can take the form of an instantaneous value or a sliding mean.

Device models without GPS nevertheless have a battery-backed real-time clock, which can be used to output a date and time stamp in the data telegrams.

The CLIMA SENSOR US is equipped with a built-in heating system, so more or less stopping ice or snow from building up on the device.

3 Mode of operation

3.1 Wind measurement:

The wind speed measuring module of the **CLIMA SENSOR US** consists of 4 ultrasonic converters, arranged in pairs of two facing each other via a reflector. The two resulting measurement paths are at right angles to each other. The converters function both as acoustic transmitters and acoustic receivers.

The electronic control system is used to select the respective measurement path and its measuring direction. When measurement starts, a sequence of 4 individual measurements is performed in all 4 directions of the measurement paths in a basic measuring cycle of one millisecond.


The measuring directions (sound propagation directions) rotate clockwise. Mean values are calculated from the 4 individual measurements of the path directions and then used for further calculations. The time required for a measuring sequence at the maximum measuring speed is exactly 10.0 milliseconds (measuring sequence 8ms + 2ms for analysis).

3.1.1 Measuring principle: Wind speed and direction

The propagation speed of sound in calm air is superposed by the speed components of an airflow in the direction of the wind. A wind speed component in the propagation direction of the sound supports its speed of propagation, so causing it to increase. On the other hand, a wind speed component against the propagation direction reduces the speed of propagation. The propagation speed resulting from superposition results in different propagation times of the sound at different wind speeds and directions over a fixed measurement path.

As the speed of sound greatly depends on the temperature of the air, the sound propagation time is measured on each of the two measurement paths in both directions. This rules out the measurement result being influenced by temperature.

By combining two measuring paths at right angles to each other, the sum and angle of the wind speed vector are obtained in the form of rectangular components. After the rectangular speed components have been measured, they are converted to polar coordinates by the CLIMA SENSOR US microprocessor and then output as a sum and angle of wind speed.

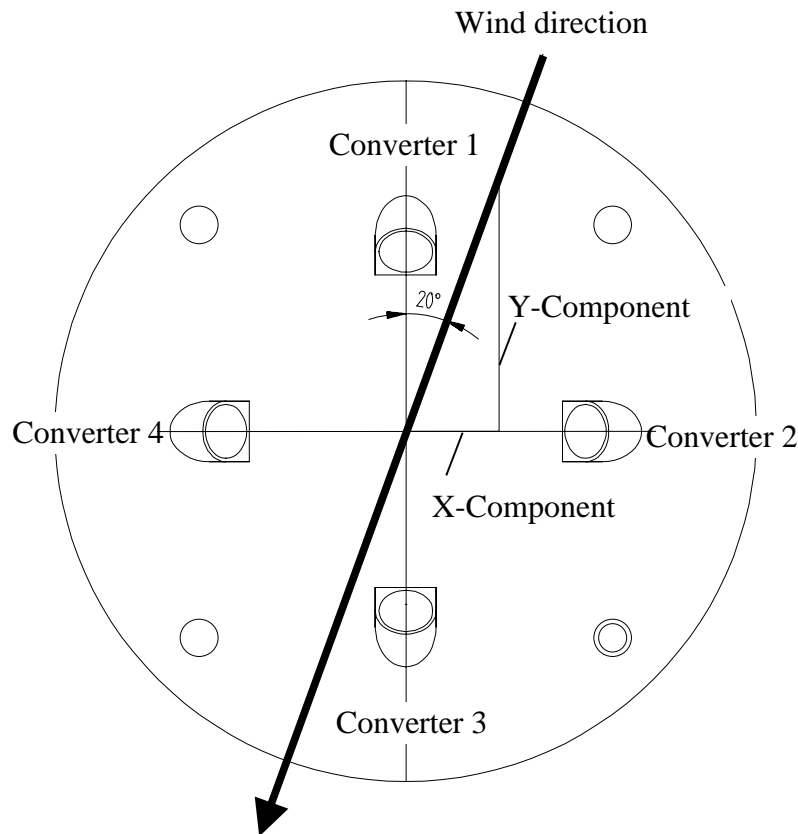

3.1.2 Measuring principle: Acoustic virtual temperature

The thermodynamic interrelationship between the propagation speed of sound and the absolute air temperature is defined by a root function. The speed of sound is also more or less independent of the air pressure and only depends on the absolute air humidity to an insignificant extent.

This physical relationship between the speed of sound and temperature can be used to measure the temperature of the air as long as its chemical composition is known and remains constant. The levels of gases in the atmosphere are constant and, with the exception of the content of water vapour, vary by no more than a few 100ppm (CO₂) even over lengthy periods.

The determination of gas temperature via its speed of sound is performed directly from measurement of its physical properties without the indirect step of thermal coupling of this gas to a sensor, which would otherwise be necessary.

Note:

If solar irradiation or heating activity cause the device to become hotter, this measured value cannot always be taken as a true reading particularly in the case of low wind speeds.

3.2 Temperature and humidity measurement:

A built-in hygro-thermo sensor with an I²C interface is used to measure temperature and humidity levels. The sensor's power consumption is so low that even when actively performing measurement, the increase in temperature through heat loss can hardly be measured.

The hygro-thermo sensor is protected from the ingress of water by a miniature housing with a vapour-permeable membrane. The very small air exchange volume means that the sensor responds to changes in air humidity in a matter of seconds.

The sensor is mounted on a plug-in board equipped with weather and radiation protection and therefore supplies accurate values for air temperature and humidity even when exposed to solar irradiation.

3.3 Air pressure:

Air pressure is measured with a MEMs sensor, based on piezoresistive technology, and output via an I²C interface.

The sensor is mounted on the same plug-in board as the hygro-thermo sensor. The air pressure sensor is likewise protected from the ingress of water by a protective element equipped with a vapour-permeable membrane.

3.4 Brightness:

Brightness is measured using 4 individual brightness sensors facing the 4 points of the compass at an elevation angle of 40°. They are soldered onto a printed board in the cover of the device as SMD components.

The elevation angle of 40° corresponds to the mean vertical position of the sun (equinox) in our latitudes.

For meaningful mapping of the intensity dynamic for brightness with 5 orders of magnitude the sensors output a current which is logarithmically dependent on the brightness level.

The current reading is converted to a digital measured value by an A/D converter. After further processing as a digital value by the CPU, it is then output in the telegram or as an analogue linear value in a pre-selectable range of measured values.

3.5 Precipitation:

A Doppler radar module is used to detect precipitation and determine its intensity. This radar module operates with radiated RF power of a few milliwatts at a frequency which has international clearance for this purpose.

Like the brightness sensors, the radar module is mounted on top of the printed board in the device cover and is protected from environmental influences by an optically and electromagnetically transparent cover.

The sending and receiving aerial points vertically upwards, towards precipitation from above.

3.5.1 Measuring principle: Precipitation:

The Doppler radar beams a very small (mW range) electromagnetic signal via an array of sending aeriels. A receiving aerial array receives both the transmitted signal and the signal reflected by tiny particles or droplets.

Where there is a difference in frequency between the send and receive signal, combining the

transmitted signal with the reflected signal will generate the difference frequency of the two signals. This difference frequency is an accurate measure for the relative speed at which the particle is moving towards or away from the Doppler radar module.

The speed at which rain drops fall is roughly proportional to the square root of the drop diameter (Gunn and Kinzer 1949).

The precise relationship between the speed at which rain falls and the diameter / volume of the rain drops can be used to calculate individual volumes and thus the rainfall intensity based on the frequency rate and the frequency of the Doppler frequencies.

3.5.2 Type of precipitation (Synop Code):

The type of precipitation can be roughly determined from the measured values of rainfall speed, intensity, temperature and humidity.

The following table shows the codes for the identifiable types of precipitation based on the Synop Table 4680, VuB Vol. D Supplement 6 applicable to automatic stations:

Synop Code $w_a w_a$	Meaning
0	No precipitation
40	Precipitation present
51	Light drizzle
53	Moderate drizzle
55	Heavy drizzle
61	Light rain
62	Moderate rain
63	Heavy rain
67	Light rain and/or drizzle with snow
68	Moderate rain and/or drizzle with snow
70	Snowfall
71	Light snow
72	Moderate snow
73	Heavy snow
74	Ice crystals
89	Heavy hail

Table 1: Synop Code table

4 Installation of CLIMA SENSOR US

Caution:

The working position of the CLIMA SENSOR US is vertical (plug connection at bottom).

During installation, dismantling, transport or servicing of the CLIMA SENSOR US, it must be ensured that no water gets into the base of the device or plug connector.

When using a lightning rod, it should be installed at less than 45° to a wind measurement path to avoid any interference from reflections.

4.1 Selection of installation site

An exposed position should be selected as the installation site. The measurement properties should not be influenced by light reflections, cast shadows or the device being positioned in the lee of the wind. Protection against lightning and overvoltages should also be provided by the customer.

4.2 Mechanical installation

Proper installation of the CLIMA SENSOR US is carried out using a tube socket R1½" (Ø 48.3 mm) and at least 30 mm in length. The inside diameter of the tube socket must be at least 30 mm as the electrical connection of the CLIMA SENSOR US is carried out at the bottom of the device. After connection the CLIMA SENSOR US is then mounted on the tube or mast socket. The marking for north on the device must be aligned to north (see section 4.2.1). The device is fixed to the shaft with the two Allen screws (AF 4 mm).

Caution:

The allen screws must be tightened to 2 Nm


4.2.1 Alignment to north

For exact determination of the wind and Brightness direction the CLIMA SENSOR US must be installed aligned to **north** (true north).

When aligning the device, the **marking for north (N)** must point to **north** (true north). To do so, select a conspicuous feature of the landscape to the north or south with a compass and turn the mast or sensor until the marking for north points to true north.

When aligning the device to north using a compass, bear in mind the magnetic variation (= deviation in the direction of the compass needle from true north) and possible interference from magnetic fields (e.g. iron parts, electric cables).

The lower edge of the sensor base is equipped with a **bore for north** aligned to the marking for north. This bore allows a mast adapter with a pin for north to be used here. The mast adapter is not included in the scope of supply.

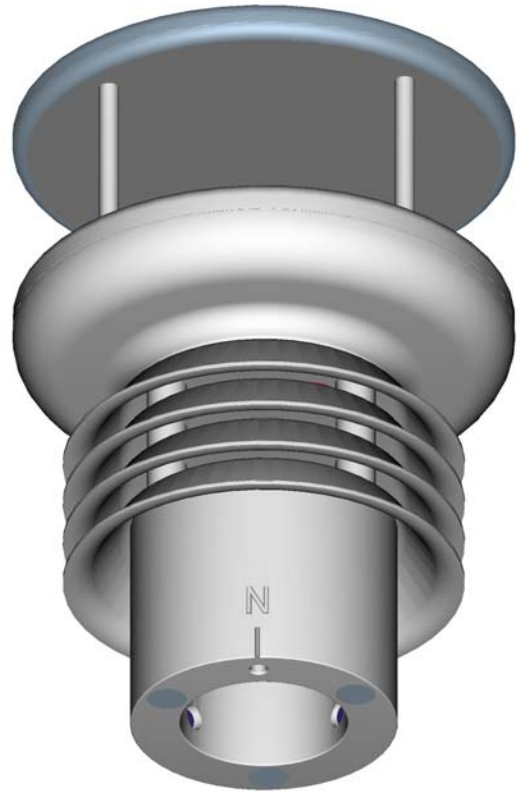

4.3 Electrical installation


The CLIMA SENSOR US is equipped with a 19-pin plug for electrical connection. A socket outlet (mating connector) is included in the scope of supply.

4.3.1 Cable, cable preparation, connector installation


The connecting cable should have the following properties depending on the model of the device: 16 cores, core cross-section for supply and data communications 0,25 mm², cable diameter max. 8.0mm, resistant to ultraviolet rays, overall shielding.

Note:


A prepared connecting cable is available for the CLIMA SENSOR US as an optional accessory (see Accessories).

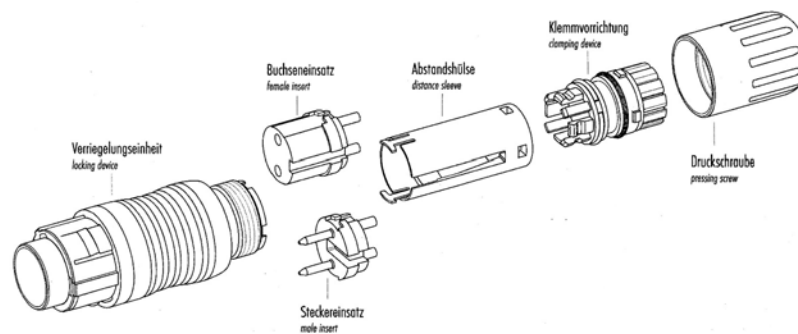


1. Strip over L = 33mm.
Do not remove sheath.
2. Slip on pressing screw and clamping device.
Remove sheath.
3. Strip wire strands and tin-coat.
4. Fan / comb out shielding. Thread shield wires into crown all round.

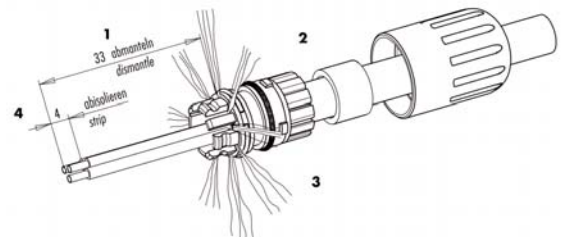


5. Engage distance sleeve and clamping device.

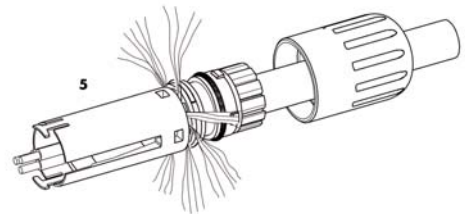


6. Slide assembled unit backwards over cable (approx. 10mm).
7. Solder inserts in place.

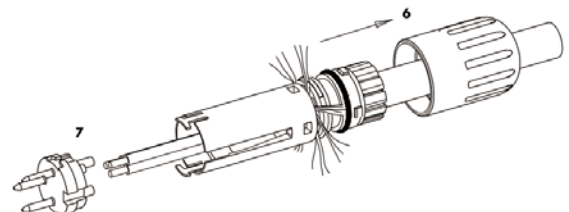

8. Slide assembled unit forwards until it engages in the contact insert.
9. Draw shield wires towards shielding ring and shorten.
too long: wires on packing ring – no seal
too short: no contact with shaft ring

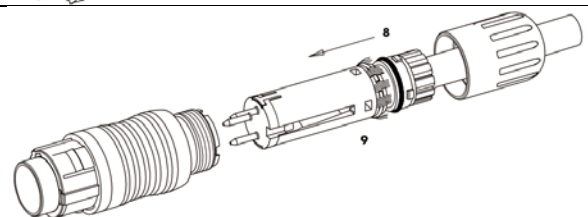


10. Insert assembled unit in carrier sleeve

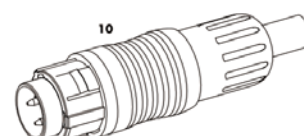

4.3.2 Connection diagram for 16-core cable (function example)

Note:

- See the supplementary sheet "Werkseinstellung" with the factory settings for precise function assignment.
- The pins A,B,C,H,I,K,L,M,N,O,P,R,S,T,U are electrically isolated from the supply voltage.

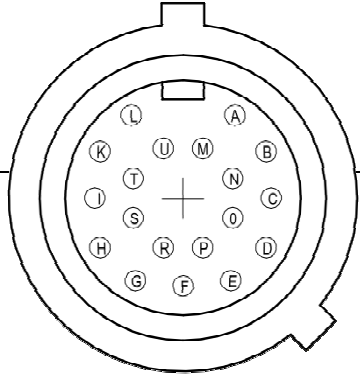Electrical connection				View of solder terminal of socket outlet
PIN	Colour coding**	Assignment	Function	
T	PINK	Analogue 0..10V	Wind speed (m/s)	
S	VIOLET	Analogue 0..10V	Wind direction (°)	
O	RED-BLUE	Analogue 0..10V	Air temperature (°C)	
N	GREY-PINK	Analogue 0..10V	Relative humidity (%)	
C	BROWN-GREEN	Analogue 0..10V	Air pressure (hPA)	
B	WHITE-YELLOW	Analogue 0..10V	Brightness (lux)	
A	WHITE-GREEN	Analogue 0..10V	Brightness direction (°)	
P	YELLOW-BROWN	Analogue 0..10V	Precipitation intensity	
H	BLUE	GND isolated	Analogue earth	
I	GREY	GND isolated	Analogue earth	
L	YELLOW	TXD+, RXD+ (HD)	Serial interface (RS485)	
K	GREEN	TXD-, RXD- (HD)	Serial interface (RS485)	
U	BROWN	RXD+ (full duplex)	Serial interface (RS485)	
M	WHITE	RXD- (full duplex)	Serial interface (RS485)	
R	not assigned	(-)24V feedback	(-) Power supply*	
E	RED	(+)24V AC/DC nom.	(+) Power supply*	
F	not assigned	(+)24V AC/DC nom.	(+) Power supply*	
D	BLACK	(-)24V AC/DC nom.	(-) Power supply*	
G	not assigned	(-)24V AC/DC nom.	(-) Power supply*	
SH	GREEN/YELLOW	CABLE SHIELD	Shielding from electric fields	


* reverse voltage protection

** The above colour coding scheme only applies to cables of the type SABIX D315 FRNC 16x0.25.

4.3.3 Connection with optional 16-core cable 509311

The optional 509311 cable is a ready prepared 16-core cable which has a plug connector on the transmitter side and open, colour-coded wire ends on the user side.
See section 4.3.2 for cable assignment.

4.3.4 Connection diagram for 8-core cable (function example)

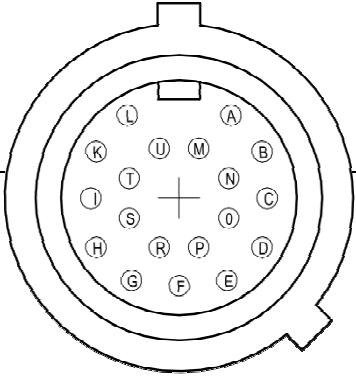Electrical connection				View of solder terminal of socket outlet
PIN	Colour coding	Assignment	Function	
T	–	–	–	
S	–	–	–	
O	–	–	–	
N	–	–	–	
C	–	–	–	
B	–	–	–	
A	–	–	–	
P	–	–	–	
H	–	–	–	
I	GREY	GND isolated	Analogue earth	
L	YELLOW	TXD+, RXD+ (HD)	Serial interface (RS485)	
K	GREEN	TXD-, RXD- (HD)	Serial interface (RS485)	
U	BROWN	RXD+ (full duplex)	Serial interface (RS485)	
M	WHITE	RXD- (full duplex)	Serial interface (RS485)	
R	–	–	–	
E	RED	(+)24V AC/DC nom.	(+) Power supply*	
F	–	–	–	
D	BLUE	(-)24V AC/DC nom.	(-) Power supply*	
G	–	–	–	
SCH	GREEN/YELLOW	CABLE SHIELD	Shielding from electric fields	

* reverse voltage protection

4.3.5 Connection with optional 8-core cable 509427

The optional 509427 cable is a ready prepared 8-core cable which has a plug connector on the transmitter side and open, colour-coded wire ends on the user side.
See section 4.3.2 for cable assignment.

5 Servicing

As the device does not have moving parts, i.e. is not subjected to wear during operation, only minimal servicing is required.

The device may become soiled depending on its installation site. Cleaning should be carried out using water, non-aggressive cleaning agents and a soft cloth.

Caution:

During storage, installation, dismantling, transport or servicing of the CLIMA SENSOR US, it must be ensured that no water gets into the device or plug connector.

5.1 Calibration

The CLIMA SENSOR US does not contain any adjustable components such as mechanical or electrical trimming elements. All components and materials are invariant over time. There is thus no need for regular calibration due to ageing. Only major mechanical deformation of the device and a resulting change in the measurement path length of the ultrasonic converters can cause errors in measured values.

The acoustic virtual temperature can be used to check the effective length of the acoustic measurement path. A change of approx. 0.3% in the measurement path length and thus a measuring error of approx. 0.5% for wind speed corresponds to a deviation of 1 K in the virtual temperature at 20°C. With a temperature deviation of approx. 4 K for the virtual temperature a measuring error of approx. 1% results for wind speed.

Important:

Mechanical damage involving deformation of the device may lead to errors in measured values.

5.2 Warranty

Damage caused by improper handling or external influences, e.g. strike by lightning, are not covered by the warranty provisions. The warranty is void if the device is opened.

Important:

The CLIMA SENSOR US must be returned in the original packaging.

6 Functional description

The functions of the CLIMA SENSOR US are described below.

The CLIMA SENSOR US has 2 command interpreters, one for the specific THIES **ASCII format** and one for **MODBUS communication**.

The relevant command interpreter must be switched on depending on the communication format required. In the standard configuration the THIES command interpreter is the default. This setting can be changed with **Command CI**.

6.1 Command interpreter THIES ASCII format

The CLIMA SENSOR US is equipped with a RS485 / RS422 interface for serial communication. It can be operated either in full or half duplex mode and at different baud rates.

A standard terminal program for example can be used for communication with the CLIMA SENSOR US. With a Windows-based operating system Hyper Terminal is included in the scope of supply. Should it not be included, subsequent installation is possible if required.

When the CLIMA SENSOR US is started, the firmware version, date of creation for the firmware, the serial number of the device, system time, device ID and duplex mode of the serial interface will be output. The last baud rate to be selected and stored is used for output.

Example:

```
-----  
THIES-CLIMASENSOR-US  
Version: 2.4 / HW:00  
Nov 15 2013 / 07:58:48  
Serial-No.: 011130000  
System-Time: 6:03:18  
System-ID.: 00  
Serial-COM: 4-wire RS485  
Interpreter: Thies  
-----  
Help: 00HH<CR>  
-----
```

The example shows that the CLIMA SENSOR US with the device ID 00 is operating in full duplex mode.

6.1.1 Duplex mode

Duplex mode decides the type of physical connection of the serial interface. In full duplex mode the send and receive signals are each transmitted via separate pairs of cables. This means it is possible to send and receive signals in parallel, i.e. simultaneously. In half duplex mode transmission of the send and receive signals is via the same pair of cables and does not take place simultaneously, but in turn, see **Command DM**.

For bus mode with half duplex (RS485), in which the CLIMA SENSOR US is generally the slave, the line transmitter has to be switched to the high impedance state in the transmission pauses so as not to suppress the responses of the other bus users.

With point-to-point connections in full duplex mode (RS422) it may be important to leave the line transmitter switched on during the transmission pauses so that a maximum differential input level

results in a maximum signal-to-noise ratio. This depends on the interference conditions influencing the communication lines.

Command DM (Duplex Mode) can be used to select half duplex mode. In this setting the line transmitter is only ever switched on with transmission.

For full duplex operation there are 2 modes, one for bus mode (RS 485) in which the line transmitter is controlled as in half duplex mode, and an additional mode (RS 422) in which the line transmitter also remains switched on with receive. See **Command DM**.

The following table shows the functional options for full and half duplex mode.

Full duplex mode	Half duplex mode
Autonomous telegram output possible (see Command TT)	Autonomous telegram output possible with the following restriction: Communication with the CLIMA SENSOR US is only possible in the first 10s after each restart. This is followed by autonomous telegram output.
Bus mode possible (RS 485, DM=1) Bus mode not possible (RS 422, DM=2)	Bus mode possible (RS 485, DM=0)

Table 2: Restrictions in full and half duplex mode

6.1.2 Delayed response

With serial communication it should be remembered that the CLIMA SENSOR US reacts very quickly to incoming telegrams. The response time of the device is in the low millisecond range. The delay between the receive and send signal may be too short for some interface converters. It is possible that an interface converter will not have switched over between the modes 'send' and 'receive' in this period. This may result in incomprehensible telegrams.

To avoid this effect the CLIMA SENSOR US offers the parameter RD (Response Delay). With this parameter the response is additionally delayed by the selected value in milliseconds on receive. The setting for this parameter on delivery depends on the article number of the device.

6.1.3 General telegram structure

For serial communication the CLIMA SENSOR US has a fixed telegram format, which also permits communication in bus mode. It has the following form:

NNBB<cr> <cr> stands for Carriage return (Enter key)

for data request and

NNBBPPPPP<cr> <cr> stands for Carriage return (Enter key)

for a change in parameters.

The individual letters have the following meanings:

NN: Two-position ID of CLIMA SENSOR US. It can be selected in the range from 00 to 99. The default is the ID '00'; see also **Command ID**.

BB: Two-position command. A complete list can be found in the section List of commands.

PPPPP: Parameter input is always left-justified and may be between 0 and 5 positions, with the exception of the parameters RT, SN and TA (see also section 8 List of commands).

Example:
Request for telegram No. 2. The relevant command is:

00TR2<cr> <cr> stands for Carriage return (Enter key)

Alternatively,

00TR00002<cr> can also be input.

The prerequisite in this example is that the Clima Sensor ID has the value '00'.

Example:

With the command

00BR<cr> <cr> stands for Carriage return (Enter key)

the selected data record for the baud rate is returned.

!00BR01152 stands for 115200 baud

Note:

The input buffer of the CLIMA SENSOR can be cleared by transmitting Carriage return <CR>. If the CLIMA SENSOR US has any invalid characters in the input buffer, the buffer can be processed by transmitting Carriage return. In this case it is recommended transmitting a Carriage return at the beginning of a telegram, e.g.: <CR>00TR00002<CR>

6.1.4 Storage of CLIMA SENSOR US parameters

After parameters have been changed with the user or administrator key, the CLIMA SENSOR US must be reset to the locked state with the command "00KY0" (key "00000"). (In this example the Clima Sensor ID is "00".)

Parameters will only be stored permanently if the key is reset (incl. after restart).

If the CLIMA SENSOR US is restarted without all edited parameters being stored beforehand, they will be lost. It is therefore advisable to save important parameters as soon as they are input by resetting the key (00KY0). Alternatively, the command "00CS1" can be used to save the configuration without having to leave the command level.

6.1.5 Return values of CLIMA SENSOR US

After a valid command has been input, the CLIMA SENSOR US sends an acknowledgement, e.g. acceptance of the parameter or outputs a data telegram.

For a standard command the response starts with '!', followed by the ID and the parameter value.

If the input command is TR or TT, the CLIMA SENSOR US transmits a data telegram as the response.

6.1.6 Access mode

For configuration the CLIMA SENSOR US has a set of commands which determine behaviour in terms of the propagation time. There are three levels for commands:

- query mode
- user mode
- configuration mode

Query mode ("READ ONLY"):

This mode comprises commands which do not influence the parameters of the CLIMA SENSOR US. They include for example output of the system status and data telegram request with TR.

User mode ("USER"):

This mode comprises commands which alter the behaviour of the CLIMA SENSOR US. These parameters can be changed by the user. The system behaviour of the device is altered with these commands. This category of commands covers e.g. settings for output scaling and averaging.

Configuration mode ("ADMIN"):

This mode comprises commands which are defaults set at the factory for delivery.

The device is equipped with an access key KY to distinguish between commands of the three groups when parameterising the CLIMA SENSOR US. Inputting the key accesses the individual levels. Access to higher-level commands includes access to commands at a lower level.

Access key	Response from CLIMA SENSOR US	Command level
00KY00000	READ ONLY !00KY00000	Query mode (default)
00KY00001	USER ACCESS !00KY00001	User mode
00KY04711	ADMIN ACCESS !00KY04711	Configuration mode

Table 3: Access keys for different command levels

After the access key has been changed, the CLIMA SENSOR US transmits a response which contains not only the input parameter but also the access mode.

After parameters have been changed with the key '00001' or '04711', the CLIMA SENSOR US must be reset to the initial position with the command 00KY00000 for the parameters to be saved (see also section 6.1.4).

If the power supply is interrupted, the device is automatically reset to query mode.

Example:

00KY1 Switch to "USER ACCESS" mode

!00KY00001	Response from CLIMA SENSOR US
Setting rights -> USER	Response from CLIMA SENSOR US
00AV5 Command for changing the averaging period	
!00AV00005	Response from CLIMA SENSOR US
New AVeraging time frame: 5	Response from CLIMA SENSOR US
00KY0 Command for "READ ONLY" mode	
!00KY00000	Response from CLIMA SENSOR US
Setting rights -> READ ONLY	Response from CLIMA SENSOR US
Configuration saved.	Response from CLIMA SENSOR US

6.1.7 Baud rate

The baud rate is used to select the transmission speed via the serial interface. The parameter range is from 1200 baud to 921.6 kbaud.

Reprogramming of the baud rate with the command BR at once affects the CLIMA SENSOR US temporarily. After the transmission of a command, the user program used must be set to the corresponding baud rate. The baud rate will only be stored permanently after resetting to query mode (READ ONLY) or when using the command "CS". This means that unintentional resetting of the baud rate can be cancelled using the Off/On switch on the CLIMA SENSOR US (see also section 6.1.4).

Example:

The baud rate is to change to 115200 baud:

Command:

00KY4711 Allow command for access	
!00KY04711	Response from CLIMA SENSOR US
Setting rights -> ADMIN	Response from CLIMA SENSOR US
00BR1152 Command to change baud rate	
!00BR01152	Response from CLIMA SENSOR US
The baud rate of the PC interface now has to be changed to 115200!	
To save baud rate:	
00KY0 Return to "READ ONLY" mode	
!00KY00000	Response from CLIMA SENSOR US
Setting rights -> READ ONLY	Response from CLIMA SENSOR US
Configuration saved.	Response from CLIMA SENSOR US
Or alternatively with:	
00CS1 Save without leaving command mode	
!00CS00001	Response from CLIMA SENSOR US
Configuration saved.	Response from CLIMA SENSOR US

6.1.8 Device ID

The device ID specifies the address to which the CLIMA SENSOR US should respond with serial communication. The device ID is in the range from '00' to '99'. The default is '00'. Every telegram from the CLIMA SENSOR US starts with the ID selected. This provides for bus mode under certain conditions, see section 6.1.9.

The device ID "99" is a generic address to which all Clima Sensors will respond. The ID is reprogrammed with the command 'ID'. The new ID of the CLIMA SENSOR US is specified as the parameter. After the change has been made, the CLIMA SENSOR US immediately responds to the new address (see also section 6.1.4).

Example:

00KY4711	Allow command for access	
!00KY04711		Response from CLIMA SENSOR US
Setting rights -> ADMIN		Response from CLIMA SENSOR US
00ID00004	Change ID to address 4	
!00ID00004		Response from CLIMA SENSOR US
		The CLIMA SENSOR US now responds to the new ID '04'. To permanently change the ID, see section 9.1.4.
04AV		Query averaging time with new ID
!04AV00005		Return of averaging time

6.1.9 Bus mode

The concept of ID-based communication allows more than one CLIMA SENSOR US to be operated in bus mode. The prerequisites for this are:

- Individual bus users must have different IDs
- Master-slave structure, i.e. there is a device in the bus (control, PC, etc.) that polls the data of the individual Clima Sensors and possibly parameterises them.

In bus mode there are no restrictions on parameterizability.

It is not recommended using a CLIMA SENSOR US with the ID '00' here as this ID is for devices that are integrated in the bus for the first time.

Firmware update is not possible in half duplex mode.

6.2 Command interpreter MODBUS RTU

If the command interpreter MODBUS RTU has been selected, the transmitted bytes will be interpreted according to the MODBUS specification (<http://www.modbus.org/>). The Clima Sensor Ultrasonic acts as a MODBUS slave here.

Data is transmitted in packets, so-called frames, max. 256 bytes in length.
Every packet includes a 16-bit CRC check sum (initial value: 0xffff).

Slave address	Function code	Data	CRC	
1 byte	1 byte	0...252 byte(s)	2 bytes	
			CRC low-byte	CRC high-byte

Table 4 : MODBUS frame

The following MODBUS functions are supported:

- 0x04 (read input register)
- 0x03 (read holding registers)
- 0x06 (write single register)
- 0x10 (write multiple registers)

The sensor supports write access for the slave address 0 ("Broadcast").

All MODBUS requests received are checked for validity before execution. With any error the weather station responds with one of the following exceptions (→MODBUS Exception Responses).

Code	Name	Meaning
0x01	ILLEGAL FUNCTION	The function code in the request is not permissible for the register address.
0x02	ILLEGAL DATA ADDRESS	The register address in the request is invalid.
0x06	SLAVE DEVICE BUSY	Device not ready. Master should try again later.

Table 5 : MODBUS exceptions

6.2.1 Measured values (input register)

All measured values of the Clima Sensor occupy 32 bits, i.e. 2 MODBUS register addresses. The following table shows the assignment of measured values to the register address, with the measured values being sorted as follows:

- by type of measured value (30003 to 34999)
- in an unbroken sequence (35001 to 39999)

The measuring values are available also under protocol addresses 2 to 4998 resp. 5000 to 9998. The protocol addresses arise from the register address less an offset of 30001.

Register address	Parameter name	Unit	Multiplier	Explanation	Data type
30003 0x7533	Mean wind speed	m/s	10	Value / 10 (to 1 decimal place, e.g. 101=10.1m/s)	U32
30203 0x75FB	Mean wind direction	°	10	Value / 10 (to 1 decimal place, e.g. 1010=101.0°)	U32
30401 0x76C1	Air temperature	°C	10	Value / 10 (to 1 decimal place, e.g. 255=25.5°C)	S32
30403 0x76C3	Internal temperature of housing	°C	10	Value / 10 (to 1 decimal place, e.g. 355=35.5°C)	S32
30405 0x76C5	Acoustic temperature	°C	10	Value / 10 (to 1 decimal place, e.g. 255=25.5°C)	S32
30407 0x76C7	Air temperature uncorrected	°C	10	Value / 10 (to 1 decimal place, e.g. 255=25.5°C)	S32
30601 0x7789	Relative humidity	% rh	10	Value / 10 (to 1 decimal place, e.g. 355=35.5° rh)	U32
30605 0x778D	Dew-point temperature	°C	10	Value / 10 (to 1 decimal place, e.g. 115=11.5°C)	S32
30801 0x7851	Absolute air pressure	hPa	100	Value / 100 (to 2 decimal places, e.g. 105000=1050.00hPa)	U32
30803 0x7853	Relative air pressure referred to standard elevation zero (NHN)	hPa	100	Value / 100 (to 2 decimal places, e.g. 105000=1050.00hPa)	U32

Register address	Parameter name	Unit	Multiplier	Explanation	Data type
31201 0x79E1	Brightness north	klux	10	Value / 10 (to 1 decimal place, e.g. 1200=120.0klux)	U32
31203 0x79E3	Brightness east	klux	10	Value / 10 (to 1 decimal place, e.g. 1200=120.0klux)	U32
31205 0x79E5	Brightness south	klux	10	Value / 10 (to 1 decimal place, e.g. 1200=120.0klux)	U32
31207 0x79E7	Brightness west	klux	10	Value / 10 (to 1 decimal place, e.g. 1200=120.0klux)	U32
31211 0x79EB	Direction of brightness	°	1	Value (no decimal place, e.g. 120=120°)	U32
31213 0x79ED	Brightness, maximum value	klux	10	Value / 10 (to 1 decimal place, e.g. 1200=120.0klux)	U32
31215 0x79EF	Brightness North	Lux	1	Value (no decimal place, e.g. 12000=12000Lux)	U32
31217 0x79F1	Brightness East	Lux	1	Value (no decimal place, e.g. 12000=12000Lux)	U32
31219 0x79F3	Brightness South	Lux	1	Value (no decimal place, e.g. 12000=12000Lux)	U32
31221 0x79F5	Brightness West	Lux	1	Value (no decimal place, e.g. 12000=12000Lux)	U32
31223 0x79F7	Brightness, highest value	Lux	1	Value (no decimal place, e.g. 12000=12000Lux)	U32
31401 0x7AA9	Precipitation status		1	Value (no decimal place, (0=kein precipitation, 1=precipitation))	U32
31403 0x7AAB	Precipitation intensity (for last minute extrapolated to an hour)	mm/h	1000	Value (3 decimal places, e.g. 12345=12.345mm/h)	U32
31405 0x7AAD	Amount of precipitation (is reset at 24:00 h)	mm/d	100	Value (2 decimal places, e.g. 231=2.31mm/d)	U32
31407 0x7AAF	Type of precipitation	Synop Code	1	Value (no decimal place, e.g. 61=Light rain, see Table 1, section 3.5.2)	U32

Register address	Parameter name	Unit	Multiplier	Explanation	Data type
34601 0x8729	Date		1	Value (no decimal place, YYYYMMDD, e.g. 20121210=10.12.2012)	U32
34603 0x872B	Time of day		1	Value (no decimal place, HHMMSS, e.g. 121035=12:10:35)	U32
34801 0x87F1	Degree of longitude	°	1000000	Value / 1000000 (6 decimal places, e.g.)	S32
34803 0x87F3	Degree of latitude	°	1000000	Value / 1000000 (6 decimal places, e.g.)	S32
34805 0x87F5	Position of the sun elevation	°	10	Value / 10 (to 1 decimal place, e.g. 900=90.0°)	S32
34807 0x87F7	Position of the sun azimuth	°	10	Value / 10 (to 1 decimal place, e.g. 1800=180.0°/ 0°=north, 180°=south)	S32
34809 0x87F9	Height above mean sea level	m	1	Value (no decimal place, e.g. 240=240m amsl)	S32
34811 0x87FB	Sensor status		1	See sensor status chap. 6.2.4	U32
34995 0x88B3	Sensor power supply	V	10	Value / 10 (to 1 decimal place, e.g. 241=24.1V)	U32
34997 0x88B5	Live Counter	ms	1	Value. (no decimal place, internal ms counter)	U32
34999 0x88B7	Error status of last measured value		1	Value (no decimal place, 0=no error, 1= measured value was incorrect)	U32

Complete sequence of measuring values from 35001					
Register address	Parameter name	Unit	Multiplier	Explanation	Data type
35001 0x88B9	Mean wind speed (30003) ¹	m/s	10	Value / 10 (to 1 decimal place, e.g. 101=10.1m/s)	U32
35003 0x88BB	Mean wind direction (30203) ¹	°	10	Value / 10 (to 1 decimal place, e.g. 1010=101.0°)	U32
35005 0x88BD	Air temperature (30401) ¹	°C	10	Value / 10 (to 1 decimal place, e.g. 255=25.5°C)	S32
35007 0x88BF	Internal temperature of housing (30403) ¹	°C	10	Value / 10 (to 1 decimal place, e.g. 355=35.5°C)	S32
35009 0x88C1	Acoustic temperature (30405) ¹	°C	10	Value / 10 (to 1 decimal place, e.g. 255=25.5°C)	S32
35011 0x88C3	Air temperature uncorrected (30407) ¹	°C	10	Value / 10 (to 1 decimal place, e.g. 255=25.5°C)	S32
35013 0x88C5	Relative humidity (30601) ¹	% rh	10	Value / 10 (to 1 decimal place, e.g. 355=35.5° rh)	U32
35015 0x88C7	Dew-point temperature (30605) ¹	°C	10	Value / 10 (to 1 decimal place, e.g. 115=11.5°C)	S32
35017 0x88C9	Absolute air pressure (30801) ¹	hPa	100	Value / 100 (to 2 decimal places, e.g. 105000=1050.00hPa)	U32
35019 0x88CB	Relative air pressure referred to sea level (30803) ¹	hPa	100	Value / 100 (to 2 decimal places, e.g. 105000=1050.00hPa)	U32
35021 0x88CD	Brightness north (31201) ¹	klux	10	Value / 10 (to 1 decimal place, e.g. 1200=120.0klux)	U32
35023 0x88CF	Brightness east (31203) ¹	klux	10	Value / 10 (to 1 decimal place, e.g. 1200=120.0klux)	U32
35025 0x88D1	Brightness south (31205) ¹	klux	10	Value / 10 (to 1 decimal place, e.g. 1200=120.0klux)	U32
35027 0x88D3	Brightness west (31207) ¹	klux	10	Value / 10 (to 1 decimal place, e.g. 1200=120.0klux)	U32
35029 0x88D5	Direction of brightness (31211) ¹	°	1	value (no decimal place, e.g. 120=120°)	U32
35031 0x88D7	Brightness, maximum value (31213) ¹	klux	10	Value / 10 (to 1 decimal place, e.g. 1200=120.0klux)	U32

Register address	Parameter name	Unit	Multiplier	Explanation	Data type
35033 0x88D9	Precipitation status (31401) ¹		1	Value (no decimal place, (0=no precipitation, 1=precipitation))	U32
35035 0x88DB	Precipitation intensity (31403) ¹ (for last minute extrapolated to an hour)	mm/h	1000	Value (3 decimal places, e.g.. 12345=12.345mm/h)	U32
35037 0x88DD	Amount of precipitation (is reset at 24:00 h) (31405) ¹	mm/d	1000	Value (3 decimal places, e.g. 12345=12.345mm/d)	U32
35039 0x88DF	Type of precipitation (31407) ¹	Synop Code	1	Value (no decimal place, e.g. 61=Light rain, see Table 1, section 3.5.2)	U32
35041 0x88E1	Date (34601) ¹		1	Value (no decimal place, YYYYMMDD, e.g. 20121210=10.12.2012)	U32
35043 0x88E3	Time of day (34603) ¹		1	Value (no decimal place, HHMMSS, e.g. 121035=12:10:35)	U32
35045 0x88E5	Degree of longitude (34801) ¹	°	1000000	Value / 1000000 (6 decimal places, e.g.)	S32
35047 0x88E7	Degree of latitude (34803) ¹	°	1000000	Value / 1000000 (6 decimal places, e.g.)	S32
35049 0x88E9	Position of the sun elevation (34805) ¹	°	10	Value / 10 (to 1 decimal place, e.g. 900=90.0°)	S32
35051 0x88EB	Position of the sun azimuth (34807) ¹	°	10	Value / 10 (to 1 decimal place, e.g. 1800=180.0°/ 0°=north, 180°=south)	S32
35053 0x88ED	Height above mean sea level (34809) ¹	m	1	Value (no decimal place, e.g. 240=240m amsl)	U32
35055 0x88EF	Sensor status (34811) ¹		1	see sensor status chap. 6.2.4	U32
35057 0x88F1	Sensor power supply (34995) ¹	V	10	Value / 10 (to 1 decimal place, e.g. 241=24.1V)	U32
35059 0x88F3	Live counter (34997) ¹	ms	1	Value (no decimal place, internal ms counter)	U32

Register address	Parameter name	Unit	Multiplier	Explanation	Data type
35061 0x88F5	Error status of last measured value (34999) ¹		1	Value (no decimal place, 0=no error, 1= measured value was incorrect)	U32
35063 0x88F7	Brightness North	Lux	1	Value (no decimal place, e.g. 12000=12000Lux)	U32
35065 0x88F9	Brightness East	Lux	1	Value (no decimal place, e.g. 12000=12000Lux)	U32
35067 0x88FB	Brightness South	Lux	1	Value (no decimal place, e.g. 12000=12000Lux)	U32
35069 0x88FD	Brightness West	Lux	1	Value (no decimal place, e.g. 12000=12000Lux)	U32
35071 0x88FF	Brightness, largest value	Lux	1	Value (no decimal place, e.g. 12000=12000Lux)	U32

Table 6 : MODBUS input register

¹: The figures in brackets specify register addresses representing the same measured values.

The mean value for wind speed can for example be found at address 30003 and 35001.

An incorrect measured value of the type S32 (signed integer 32-bit) is reported with "0x7fffffff". An incorrect measured value of the type U32 (unsigned integer 32-bit) is reported accordingly with "0xffffffff". Alternatively, the error status can be queried via the register address 34999 or 35061 following a request for an individual measured value.

Note:

Due to uninterrupted listing of the measured values from address 35001 the MODBUS Master can read out all measured values with one request!

6.2.2 Commands (holding register)

All commands of the Clima Sensor Ultrasonic occupy 32 bits, i.e. 2 MODBUS register addresses and represent whole numbers with no leading sign except the TA command (64bit). The following example illustrates changing the baud rate to 19200 baud, with permanent storing of parameter, afterwards.

1. Set password for user level "ADMIN" (KY=4711)

Slave-address	Function code	Start address	No. of registers	No. of byte(s)	Data	CRC	
0x01	0x10	0x9C 49	0x00 02	0x04	0x00 00 12 67	0x83 B9	
						low-byte	high-byte

2. Command to set baud rate to 19200 baud (BR=192)

Slave-address	Function code	Start address	No. of registers	No. of byte(s)	Data	CRC	
0x01	0x10	0x9C 45	0x00 02	0x04	0x00 00 00 C0	0xCE F6	
						low-byte	high-byte

3. Storing of Parameter with Change-over to user-level „READ ONLY“ (KY=0)

Slave-address	Function code	Start address	No. of registers	No. of byte(s)	Data	CRC	
0x01	0x10	0x9C 49	0x00 02	0x04	0x00 00 00 C0	0xCE F3	
						low-Byte	high-Byte

6.2.3 Commands and descriptions

The following table shows the available commands and associated passwords for read and write.

Command	MODBUS register address Protocol address	Description	Password	
			Read ¹	Write ²
Command AV	40015 / 14	Averaging interval for wind speed and wind direction. 0..1200 (x100ms)	Without	Admin
Command BR	40005 / 4	Baud rate (see Command "BR" Thies format)	Without	Admin
Command CI	40013 / 12	Command interpreter (see Command "CI" Thies format)	Without	Admin
Command DM	40011 / 10	Duplex mode (see Command "DM" Thies format)	Without	Admin
Command HC	40023 / 22	Heating conditions	Without	Admin
Command HS	40025 / 24	Height setting	Without	Admin
Command HT	40027 / 26	Heating control	Without	Admin
Command ID	40003 / 2	Identification number / slave address	Without	Admin
Command KY	40009 / 8	Set key / password (admin = 4711)	Without	Without
Command NC	40017 / 16	North correction of wind direction (0..359°)	Without	Admin
Command RS	40253 / 252	Reset: 1 -> Warm start 10 -> daily total of precipitation = 0	Without	Admin
Command SH	40019 / 18	Station height (0...9000m)	Without	Admin
Command SN	40007 / 6	Serial number	Without	Not permitted
Command SV	45005 / 5004	Software Version e.g.: 160 = V1.60	Without	Not permitted
Command TA	45001 / 5000	Thies aricle number e.g: 4.9200.00.000 (64Bit)	Without	Not permitted
Command TZ	40021 / 20	Time zone (see Command "TZ" Thies format)	Without	Admin

Table 7 : List of commands

¹: Command without parameter (used to read the selected parameter)

²: Command with parameter used to write a new parameter)

6.2.4 Sensor Status

Explanation:

Bit-Number	Function	Description	
Bit 0	General error	Averaging time < 10sec	An error is output when over a period of 10 seconds no new measuring value can be detected..
		Averaging time >= 10sec	An error is output, when less than 50% values are included in the averaging buffer, basing on a secondly measuring rate. Example: With an averaging time of 10 seconds there must be at least 5 measuring values included in the averaging buffer.
Bit 1	User Averaging memory	Indicates the used averaging memory. Bit 1 to bit 3 indicate the space usage of the averaging buffer in binary format. 0: buffer $0 < x \leq 1/8$ 1: buffer $1/8 < x \leq 1/4$ gefüllt 2: buffer $1/4 < x \leq 3/8$ gefüllt 3: buffer $3/8 < x \leq 1/2$ gefüllt 4: buffer $1/2 < x \leq 5/8$ gefüllt 5: buffer $5/8 < x \leq 3/4$ gefüllt 6: buffer $3/4 < x \leq 7/8$ gefüllt 7: buffer $7/8 < x \leq 1$ gefüllt	
Bit 2			
Bit 3			
Bit 4	Plausibility on	Is set when plausibility is activated	
Bit 5	Static error	Is set when a static error occurred. E.g. permanent violation of the VT, no measuring values. (> 1min)	
Bit 6	Heating release	Is one, when the heating control is activated.	
Bit 7	Heating status	Is on, when the heating is activated.	

6.3 Analogue outputs

Eight analogue connections permit the output of wind speed, wind direction, air temperature, relative humidity, air pressure, brightness, direction of brightness or 4 individual direction values for brightness, precipitation intensity or precipitation status in the form of an analogue voltage value.

The measured values

1. wind speed, 2. wind direction and 3. air temperature

are permanently assigned to the analogue outputs T, S and O (T,S,O = PIN designation of plug connector); see section 4.3.2.

Command "OL" can be used to switch the optional measured values to any of the remaining 5 analogue outputs; see Command "OL".

Scaling of certain measured values to the voltage output is also possible. Wind direction, direction of brightness and precipitation status are fixed values, which are not scalable.

By default, the analog channels are linked always in the same way. Measuring values, missing by partial configuration level, and erroneous measuring values are treated acc. to the command "EI" (Error Inversion).

The following table lists the selectable parameters and possible scaling:

Parameter	Measured value	Scaling	Analogue output
AB80106	Air pressure	800...1060hPa	0...10V
AH00100	Relative humidity	0...100%	0...10V
AL00120	Brightness	0...120klux	0...10V
AP00100	Precipitation intensity	0...100mm/h	0...10V
AT14060	Air temperature	-40...+60°C	0...10V
AR00060	Wind speed	0...60m/s	0...10V
Fixed scale	Wind direction	0°...360°	0...10V
Fixed scale	Brightness direction	0°...360°	0...10V

Table 8: Scaling of analogue outputs

6.3.1 North correction

The command NC can be used to shift the angle measured for wind direction by an angle offset in a positive direction. The device adds the value input to the angle measured for the wind direction. If the resulting value is greater than 360°, 360° is subtracted from the corrected angle value. This setting is used whenever it is not possible to align the CLIMA SENSOR US exactly to north and this angle needs to be electronically corrected afterwards.

See also **Command NC**.

If a wind speed < 0.1m/s is calculated, the wind direction is set to zero. The wind direction 0° is reserved for no wind.

In contrast to no wind, the precise wind direction north, i.e. 0°, is output as 360° with wind speeds > 0.1 m/s.

6.4 Instantaneous values and output of raw measured values

The output of instantaneous values is generally a special case. Given the high acquisition speed for the measured values averaging of the data is advisable in most cases. If instantaneous values are to be output, averaging must not be switched on. The parameter AV should be set to '0'; see **Command AV**.

The OR parameter is used to adjust the output rate with autonomous output.

6.4.1 Averaging

Given the high data acquisition rate averaging is recommended in most cases. The averaging period is freely selectable from 100ms to 120 seconds. See also **Table 10** under **Command AV**. It is a basic principle that only valid values are written to the averaging puffer. The size of the buffer is not determined by the number of data records but by the difference in the time stamp between the first and last data record. As a result any missing measured values do not influence the averaging result.

The CLIMA SENSOR US 2D offers two practical procedures for averaging:

- a **procedure for generating vectorial mean values** from the wind components and
- a **procedure for generating scalar mean values** from the wind components

These different procedures can each be selected for averaging wind speed as well as wind direction depending on the actual application.

Vectorial averaging takes into account the wind direction for averaging the wind speed, and the wind speed when averaging the wind direction. Both averaged variables, wind speed and wind direction, are thus evaluated together with the other measured variable. This averaging procedure is very suitable e.g. for measuring and analysing the spread of pollutants.

Scalar averaging averages the two variables, wind speed and wind direction, independently of each other. This averaging procedure leads to comparable results with mechanical pickups for wind speed and wind direction. The scalar averaging procedure is suitable e.g. for analysing sites for wind turbines where only the wind vector variable relevant to energy generation is of interest and not its direction.

The vectorial and scalar procedures can be used in one output telegram independently of wind speed and wind direction. For this purpose one of the four possible combinations is selected using the command **AM** as for **Average Method**.

Command for selecting the averaging procedure:

AM00000 Vectorial averaging of speed and direction

AM00001 Scalar averaging of speed and direction

AM00002 Scalar averaging of speed and vectorial averaging of direction

AM00003 Vectorial averaging of speed and scalar averaging of direction

6.5 Serial data output

Data transmission via the RS485 interface is referred to as serial data output. Two modes are available for transmission of the data:

- autonomous transmission of data
- transmission of data via request telegram

Autonomous transmission of the data is selected using the command 00TT000XX, with XX standing for the relevant telegram number. In this case the CLIMA SENSOR US transmits its data cyclically at the repeat rate selected with the parameter OR.

6.5.1 Data request

Command TR is used to request data from the CLIMA SENSOR US. This command has no access protection. After processing the command the device sends back a response telegram. The time between the last character in the request telegram and the first character in the data telegram is approx. 5ms; see also Command RD.

The user-defined telegram and the telegrams as described under '**Fixed telegram formats**' are available as data telegrams.

6.5.2 Autonomous telegram output

Autonomous telegram output is selected with the command TT. After a valid telegram type has been input, the CLIMA SENSOR US autonomously transmits the data telegram selected. The transmission interval is set in ms using the command OR. The default is telegram transmission every 100ms. If the selected baud rate exceeds the output cycle (the time for data transmission is greater than the interval), telegram output may not be possible.

6.5.3 Fixed telegram formats

A number of predefined telegrams are available for autonomous output (**Command TT**) and data request (**Command TR**). The detailed structure is described in Appendix 1 (Predefined data telegrams). A reference list of telegram formats can be found in **Table 9**.

Telegram name	Telegram number	Telegram structure
VDT	00001	(STX)VVV.V DDD ±TT.T *CC(CR)(ETX)
VDTHP	00002	(STX)VVV.V DDD ±TT.T hhh pppp.p *CC(CR)(ETX)
VDTBDRE	00003	(STX)VVV.V DDD ±TT.T bbbbbb ddd RRR.RRR E *CC(CR)(ETX)
VDTHPBDRE	00004	(STX)VVV.V DDD +TT.T hh pppp bbbbbb ddd RRR.RRR E *CC(CR)(ETX)
NMEA V 2.0	00005	\$WIMWV,DDD.D,R,VVV.V,X,A*CC(CR)(LF)
ALL IN	00006	VVV.V DDD ±TT.T hhh pppp.p nnnnnn eeeee sssss wwwwww bbbbbb ddd E RRR.RRR SUM.RR SS *CC (92CHR incl. <STX>...<CR><ETX>)
Scientific telegram	00014	See Appendix (section 10)

Table 9: List of predefined data telegrams

Key:

- V: Wind speed (see **Command OS**)
- D: Wind direction
- T: Temperature
- h: Relative humidity
- p: Air pressure
- b: Brightness (see **Command BO**)
- d: Direction of brightness
- R: Precipitation intensity
- E: Precipitation event
- C: Check sum (EXOR linking)
- X: Identifier for scaling wind speed (K, N, M, S = km/h, knots, m/s, mph)
- n: Brightness north
- e: Brightness east
- s: Brightness south
- w: Brightness west
- SUM.RR: Total precipitation
- S: Synop (see Table 1, section 3.5.2)

6.5.4 Generation of check sum

The check sum is the result of bitwise EXOR linking of the bytes output in the telegram. The EXOR link encompasses all bytes between the telegram start character "STX" or "\$" with the NMEA telegram and the byte "*" as the identifying character for the start of the check sum. The bytes "STX" or "\$" and "*" are thus disregarded for calculation of the check sum.

6.6 Device behaviour under extreme measuring conditions

It is a basic rule that the measured values output are always valid and can be used by the target system. In case of error, i.e. when individual sensors are unable to supply valid measured values over a certain period of time, the data in the telegram is no longer updated and 'freezes up'. If the error lasts for more than 10s, the values concerned are replaced in the telegram by an "F" instead of the outdated value, and a defined voltage value is transmitted to the analogue outputs (see also Command EI).

6.6.1 Occurrence of errors:

An error may occur under the following circumstances:

Averaging time < 10 sec (Parameter AV)	An error is output if no new measured value is ascertained over a period > 10sec.
---	--

6.6.2 Behaviour of analogue outputs

If the analogue outputs are active, they are switched to the minimum or maximum value in case of error. The parameter EI determines which of the two values is output; see **Command EI**.

6.6.3 Behaviour of telegram output

In case of error the relevant error telegram is output; see **Fixed telegram formats**.

6.7 Output of all system parameters

Most parameters of the CLIMA SENSOR US are stored internally in an EEPROM. The command SS can be used to output all stored parameters.

Before editing parameters it is recommended making a backup copy of existing settings and storing them in a text file; see also **Command SS**.

6.8 Query software version

The software version is queried using the command SV. For further details see **Command SV**.

6.9 Force restart

The command RS can be used to force a restart of the CLIMA SENSOR US. The commands

00RS00001 <cr> Warm boot

00RS00002 <cr> Restart by intentionally triggering the watchdog after approx. 12s

are only possible with ADMIN rights; see Command KY.

6.10 Plausibility

In order to recognize erroneously measured wind values, the CLIMA SENSOR US includes an internal plausibility test, assessing the measuring values on the basis of the history. Erroneous measuring values can be caused, for example, by foreign objects in the ultrasonic measuring distance.

6.11 Online Help

For a short description of commands the CLIMA SENSOR US includes an Online Help feature which provides information about individual commands. The Help text for the command is returned by inputting the command and '?'.
If the following commands are input:

00HH <cr> <cr> stands for Carriage return (Enter key)

or

00?? <cr> <cr> stands for Carriage return (Enter key)

the CLIMA SENSOR US will list all commands with the relevant Help.

Example:

Help with setting the baud rate is required: see **Command BR**.

If the command

00BR?<cr> <cr> stands for Carriage return (Enter key)

is input, the CLIMA SENSOR US responds as follows:

Baud rate in baud per second

12:	1200 baud
24:	2400 baud
48:	4800 baud
96:	9600 baud
192:	19200 baud
384:	38400 baud
576:	57600 baud
1152:	115200 baud
2304:	230400 baud
4608:	460800 baud
9216:	921600 baud

Only admin authorised!

7 Configuration of CLIMA SENSOR US by customer

The CLIMA SENSOR US is factory-set before delivery to the customer.

- This is described in the supplementary sheet with the factory settings ("*Werkseinstellung*").

The customer can alter the factory settings of the CLIMA SENSOR US or adapt them to new requirements. It should be borne in mind here that if settings are changed, the order number allocated at the factory can then no longer help with identification.

The CLIMA SENSOR US can be configured via its serial data interface using commands.

See sections:

- *Access mode*
- *List of commands*

Any standard terminal program such as "Telix" or a Windows terminal program, e.g. Hyper Terminal or "TeraTerm", can be used here.

Recommendation:

After performing configuration please amend the supplementary sheet for the factory settings and send in to the manufacturer when the device is returned for servicing or repair.

8 List of commands

	Command	Description
Command AB	<id>AB<para5>	Measuring range analogue output of air pressure (Analogue Barometer)
Command AD	<id>AD<para5>	Delay of runtime measurement (Acquisition Delay)
Command AH	<id>AH<para5>	Measuring range analogue output of relative humidity (Analogue Humidity)
Command AL	<id>AL<para5>	Measuring range analogue output of brightness (Analogue Luminance)
Command AM	<id>AM<para5>	Setting of averaging method (Averaging Mode)
Command AO	<id>AO<para5>	Switch the analogue outputs on/off (Analogue On)
Command AP	<id>AP<para5>	Measuring range analogue output of precipitation intensity (Analogue Precipitation)
Command AR	<id>AR<para5>	Scale the analogue wind speed output (Analogue Range)
Command AS	<id>AS<para5>	Set the analogue outputs to preselected values (Analogue Static)
Command AT	<id>AT<para5>	Measuring range analogue output of temperature (Analogue Temperature)
Command AV	<id>AV<para5>	Averaging period (Average)
Command BO	<id>BO<para5>	Selection calculation mode for total brightness (Brightness Option)
Command BP	<id>BP<para5>	Select parity for the interfaces (Baud Parity)
Command BR	<id>BR<para5>	Select baud rate for the interfaces (Baud Rate)
Command BT	<id>BT<para5>	Activating termination of RS485 – bus (Bus Termination)
Command CI	<id>CI<para5>	Select command interpreter (Command Interpreter)
Command CS	<id>CS<para5>	Saving configuration (Configuration Save)
Command DM	<id>DM<para5>	Duplex mode (Duplex Mode)
Command DO	<id>DO<para5>	Selecting measured or calculated brightness direction as analogue value
Command DT	<id>DT<para5>	Date and time stamp (Date and Timestamp)
Command EI	<id>EI<para5>	Analogue values in case of error (Error Inversion)
Command GP	<id>GP<para5>	Query the GPS data and the position of the sun
Command HC	<id>HC<para5>	Defines the lower threshold for heating operation (Heating Condition)
Command HH	<id>HH<para5>	Output Help (Help, identical to: <id>??<para5>)
Command HP	<id>HP<para5>	Lowest heating level in % (Heating Power)
Command HS	<id>HS<para5>	Selecting mode for setting the station height (Height Setting)
Command HT	<id>HT<para5>	Heating control ON/OFF/automatic (Heating)
Command ID	<id>ID<para5>	CLIMA SENSOR US ID (Identifier)
Command KY	<id>KY<para5>	Access key (Key)
Command MD	<id>MD>>para5>	Measuring interval for the wind measurement (Measurement Delay)
Command NC	<id>NC<para5>	Correction to north (North Correction)
Command OL	<id>OL<para5>	Linking analogue measuring values with the outputs (Output Link)
Command OR	<id>OR<para5>	Telegram output interval (Output Rate)
Command OS	<id>OS<para5>	Scale wind speed output (Output Scale)
Command PT	<id>PT<para5>	Precipitation threshold for the precipitation-flag (Precipitation Threshold)
Command RD	<id>RD<para5>	Delayed response (Response Delay)
Command RS	<id>RS<para5>	Warm-boot CLIMA SENSOR US (Reset)
Command RT	<id>RT<para7>	Set real-time clock (Real Time Clock)
Command SH	<id>SH<para5>	Station height for reducing the air pressure on sea level (Station Height)
Command SN	<id>SN<para8>	Output serial number
Command SS	<id>SS<para5>	System status (System Status)

Command SU	<id>SU<para5>	Preparation for software upload (firmware update)
Command SV	<id>SV<para5>	Version of software (Software Version)
Command TA	<id>TA<para9>	Thies order number e.g. 4.92xx.xx.xxx
Command TI	<id>TI<para5>	Short information about the telegram (Telegram Info)
Command TR	<id>TR<para5>	Telegram Request
Command TT	<id>TT<para5>	Autonomous telegram output (Telegram Transmission)
Command TZ	<id>TZ<para5>	Select the hourly offset to GPS time for the time zone

9 Commands and descriptions

Command AB

<id>AB<para5> Adjust the measuring range of the air pressure for analogue output
Access: Configuration mode (ADMIN)

Description: This command is used to specify the analogue measuring range.
 Callup e.g. with 00ABxxyy
 The first two parameters (xx) specify the lower measured value
 and the last 3 parameters (yyy) the upper measured value (resolution 10hPa).

Parameter description:

00AB80106	Sets the measuring range of the analogue output to 800...1060hPa
00AB60100	Sets the measuring range of the analogue output to 600...1000hPa

Value range(xx): 60..80 (10hPa)
Value range(yyy): 100..150 (10hPa)
Initial value(xxyyy): 80106

Command AD

<id>AD<para5> Setting delay of runtime single measurement for ultrasonic wind measurement
 (Acquisition Delay)

Description: This command can be used to select the time from the start of a propagation time
 measurement (time of flight, TOF) to the start of the following TOF (TOF repeat rate).

Value range: 2..25
Initial value: 3

Command AH

<id>AH<para5> Adjust the measuring range of relative humidity for analogue output
Access: Configuration mode (ADMIN)

Description: This command is used to specify the analogue measuring range for relative humidity.
 Callup e.g. with 00AHxxyyy
 The first two parameters (xx) specify the lower measured value and the last 3
 parameters (yyy) the upper measured value (resolution %).

Parameter description:

00AH10100	Sets the measuring range of the analogue output to 10...100%
00AH00100	Sets the measuring range of the analogue output to 0...100%

Value range(xx): 0..20 (%)
Value range(yyy): 50..100 (%)
Initial value(xxyyy): 00100

Command AL

<id>AL<para5> Adjust the measuring range of brightness for analogue output
Access: Configuration mode (ADMIN)

Description: This command is used to specify the terminal value of the analogue output.

Parameter description:

00AL00150 Sets the measuring range of the analogue output to 0...150 klux

Value range: 10..150 (klux)

Initial value: 120

Command AM

<id>AM<para5> Select the averaging method of wind measurement (Average Method)
Access: Configuration mode (ADMIN)

Description: This command can be used to select the **averaging method**. **Averaging can be either vectorial or scalar; see also section 6.4.1.**

Parameter description:

0: vectorial-averaged velocity, and vectorial-averaged direction
1: scalar-averaged velocity, and scalar-averaged direction
2: scalar-averaged velocity und vectorial-averaged direction
3: vectorial-averaged velocity und scalar-averaged direction

Value range: 0..3

Initial value: 0

Command AO

<id>AO<para5> Switch the analogue outputs on/off (Analogue On)
Access: Configuration mode (ADMIN)

Description: Command used to switch the analogue outputs on/off.

Parameter description:

0: Analogue outputs switched off
1: Analogue outputs switched on

Value range: 0..1

Initial value: 0

Command AP

<id>AP<para5> Adjust the measuring range of the precipitation intensity [mm/h] for analogue output
Access: Configuration mode (ADMIN)

Description: This command determines the measuring range final value of the precipitation intensity.

Parameter description:

00AP00010 Sets the measuring range of the precipitation intensity to 0..10 µm/s
00AP00100 Sets the measuring range of the precipitation intensity to 0..100 µm/s
00AP01000 Sets the measuring range of the precipitation intensity to 0..1000 µm/s

Value range: 10,100,1000

Initial value: 100

Command AR

<id>AR<para5> Scale the analogue wind speed output (Analogue Range)
Access: Configuration mode (ADMIN)
Description: Determines the measuring range final value for the analogue wind velocity output. The standard CLIMA SENSOR US scales the wind speed as follows:
0..10V corresponds to 0..60m/s
It may however also be advisable to scale the wind speed of 0..30m/s:
0..10V correspond to 0..30m/s
The end of the measuring range is specified with this parameter. Specification is made in m/s.

Parameter description:

1..80: Specifies of the end of the measuring range for wind speed (WS).

If the command AR00045 is input for example, 10V corresponds to a wind speed of 45m/s.

Value range: 1..80
Initial value: 00060

Command AS

<id>AS<para6> Test the analogue outputs (Analogue Static output)
Access: Configuration mode (ADMIN)
Description: By means of this command the analogue outputs can be set temporarily, e.g. for a test, to a required fixed value.

Parameter description:

00AS902500 Sets the analogue outputs to 2500mV
00AS105000 Sets the analogue WS output to 5000mV
00AS210000 Sets the analogue WD output to 10000mV
00AS900000 Sets the analogue outputs to 0mV
00AS Resets the analogue outputs to normal mode

Value range: 0..910000

Command AT

<id>AT<para5> Adjust the measuring range of the air temperature [°C] for analogue output
Access: Configuration mode (ADMIN)

Description: This command is used to specify the output range for the air temperature.

Parameter description:

00APsxxyy s : leading sign of lower temperature
xx: lower terminal value of temperature
yy: upper terminal value of temperature
00AP14060 Sets the measuring range of the temperature to -40...+60°C
00AP13070 Sets the measuring range of the temperature to -30...+70°C

Value range: s 0..1 1 = negative leading sign
xx 0..50
yy 50..90
Initial value: 14060 output range -40°C..+60°C

Command AV

<id>AV<para5> Averaging period (Average)
Access: User mode
Description: This command determines the period when the CLIMA SENSOR US averages all measuring values.
The wind measuring values are gliding-averaged, corresponding to WMO-regulation acc. to the FIFO method.

Parameter description:

Parameter for AV	Selected averaging time
0	No averaging
1	Averaging over 100ms
10..1200	Averaging over 1..120.0s

Table 10: Selection of averaging periods with parameter AV

The averaging memory is designed as a sliding memory.
On start-up the data of the averaging memory is instantly valid. Averaging is performed immediately using the measured values available.

Value range: 0..1200
Initial value: 10

Command BO

<id>BO<para5> Calculation method of the total brightness (Brightness Option)
Access: Configuration mode (ADMIN)
Description: Defines the calculation of the total brightness from the values of the 4 single sensors

Parameter description:

0: greatest value of the four sensors
1: Vectorial sum from both adjacent sensors
with the maximum measured brightness

Value range: 0..1
Initial value: 0

Command BP

<id>BP<para5> Determines the parity of the serial interface (Baud Parity)
Access: Configuration mode (ADMIN)
Description: Parameter 7: parity 7E1 Parameter 8: parity 8N1

Value range: 7..8
Initial value: 8

Command BR

<id>BR<para5> Select baud rate (Baud Rate)
Access: Configuration mode (ADMIN)
Description: CLIMA SENSOR US communication can take place at different baud rates.
The following baud rates are defined for BR:

Parameter description:

12:	1200 baud
24:	2400 baud
48:	4800 baud
96:	9600 baud
192:	19200 baud
384:	38400 baud
576:	57600 baud
1152:	115200 baud
2304:	230400 baud
4608:	460800 baud
9216:	921600 baud

Table 11: List of baud rates with telegram BR

If the baud rate is changed, the CLIMA SENSOR US will return the value of the new baud rate selected in the baud rate set previously to show command acceptance.

When the baud rate is queried with Command BR, the CLIMA SENSOR US returns the baud rate last programmed and the selected parity.

See also Command BP.

Example: 00BR

!00BR00096

Actual baud rate -> 9600 8N1

Initial value: 96

Command BT

<id>BT<para5> Activating and deactivating of the 120-ohms load resistance on the serial interface
(Bus Termination)
Access: Configuration mode (ADMIN)
Description: Command for connecting / disconnecting a load resistance of approx 120 ohms on the RS485-wire

Parameter description:

0: Bus termination off.
1: Bus termination on.

Initial value: 0

Command CI

<id>CI<para5> Select the command interpreter
Access: Configuration mode (ADMIN)
Description: This command is used to select the required command interpreter.

Parameter description:

Parameter	Description
0	THIES
1	MODBUS RTU

Value range: 0 to 1

Initial value: 0

Command CS

<id>CS<para5> Save configuration (Configuration Saving)
Access: Configuration mode (ADMIN)
Description: Command to save the configuration without leaving configuration mode. A new configuration will only be written to the EEPROM when the command "CS1" or "KY0" is executed.

Parameter: 1: Save configuration

Command DM

<id>DM<para5> Duplex mode
Access: Configuration mode (ADMIN)
Description: Duplex mode decides the type of physical connection of the serial data interface. In full duplex mode the send and receive signals are transmitted via separate pairs of cables. This means it is possible to send and receive signals simultaneously.
In half duplex mode transmission of the send and receive signals is via the same pair of cables. (Time multiplex).

Parameter description:

- 0: Half duplex mode (RS485)
- 1: Full duplex mode (RS485 transmission drivers are switched off if no data is transmitted)
- 2: Full duplex mode (RS422 transmission drivers are not switched off)

Value range: 0..2

Initial value: 2

Command DO

<id>DO<para5> Calculation of brightness direction on the analogue output (Direction Option)

Access: Configuration mode (ADMIN)

Description: The parameter determines the calculation of the analogously output brightness direction. The brightness direction 0...360° is output respectively as 0...10V. (see chap. 6.3, table 8)

Parameter description:

- 0: Output of the brightness direction calculated from the measuring values of the 4 brightness sensors
- 1: Azimuth of sun position from the GPS data
- 2: When no brightness direction can be determine because of too low intensities, the azimuthal sun position, calculated from the GPS data, shall be output instead.

Value range: 0..2

Initial value: 0

Command DT

<id>DT<para5> Date and time stamp (Date and Timestamp)

Access: Configuration mode (ADMIN)

Description: Adds the date and/or time from the internal real-time clock (see Command RT) to the output telegrams as well as the GPS position (optional). This information is always found at the end of the telegram before the check sum.

Examples of telegrams:

TR1 with DT0: 000.1 338 +22.1 *03

TR1 with DT1: 000.1 315 +21.8 21.02.13 08:07:45 *0B

TR1 with DT2: 000.2 360 +22.0 08:09:41 *28

TR1 with DT3: 000.1 349 +22.1 21.02.13 *26

TR1 with DT4: 000.2 031 +22.3 +51.509193 +009.957118 0186 21.02.13 08:10:33 *04

TR1 with DT5: 000.8 310 +22.5 +51.509180 +009.957146 0186 *0B

TR1 with DT6: 000.2 285 +28.4 +51.509153 +009.956990 0165 006.9 114.4 25.02.13 08:10:15 *13

TR1 with DT7: 000.2 279 +28.5 006.9 114.4 25.02.13 08:10:41 *0E

Parameter description:

- 0: no date and time stamp
- 1: with date and time stamp
- 2: with time stamp
- 3: with date stamp
- 4: with GPS position (optional) and with date and time stamp
- 5: with GPS position (optional)
- 6: with GPS position, position of the sun (elevation, azimuth) (optional) and with date and time stamp
- 7: with position of the sun (elevation, azimuth) (optional) and with date and time stamp

Value range: 0..3

Initial value: see factory setting on supplemental sheet.

Command EI

<id>EI<para5>	Analogue value in case of error (Error inversion)
Access:	Configuration mode (ADMIN)
Description:	Specifies whether 0 or maximum value is output at the analogue outputs in case of error. If the CLIMA SENSOR US determines a static error during a measurement, it will output an error under certain conditions. This output prevents the user from interpreting incorrect measured values. If the analogue signals of wind direction and wind speed are used for analysis, the CLIMA SENSOR US switches the outputs to the maximum or minimum output value in case of error. This parameter is used to specify whether it is the minimum or maximum value that is output in such case.
Parameter description:	
	0: Analogue outputs are set to maximum in case of error
	1: Analogue outputs are set to 0 in case of error
	2: Analogue outputs: The wind speed and all optional measured values are set to minimum (0V) in case of error, and the analogue output for wind direction is set to maximum (10V) in this case.
	3: Analogue outputs: The wind speed and all optional measured values are set to maximum (10V) in case of error, and the analogue output for wind direction is set to minimum (0V) in this case.
Value range:	0..3
Initial value:	0

Command GP

<id>GP<para5>	Request GPS data and position of the sun (optional) (GPS)
Access:	Configuration mode (ADMIN)
Description:	Query global position (degree of latitude/longitude, height) in the following format: "±DD.MMMMMM ±DDD.MMMMMM HHHH" if available. DD.MMMMMM = decimal degrees HHHH = height in metres
Parameter description:	
	1: output of sensor position in degrees
	2: output of sun's position calculated as azimuth 0..360° and elevation +/- 90°
	3: new request for GPS data
Value range:	0..3

Command HC

<id>HC<para5> Heating Condition
Access: Configuration mode (ADMIN)
Description: This command defines the lower threshold of supply voltage, when the heating is no more activated.

Parameter description:

When the supply voltage drops below the set value, the heating is no more activated. Only when the voltage exceeds the set value by 2 volts, the heating is reactivated. A request without parameters outputs the currently measured peak value of the supply voltage in the extended help.

Value range: 5..48 (Volt)
Initial value: 10

Command HH

<id>HH<para5> Help
Access: Configuration mode (ADMIN)
Description: The command HH allows detailed Help to be switched off (Verbose Mode).

Parameter description:

- 0: Detailed messages in command mode an (verbose mode on). When the device is restarted, the THIES bootloader starts first, followed by the main program.
- 1: Messages switched off, only command echo with '!' e.g. !00TT00001 (verbose mode off).
- 2: No restart messages output (silent boot mode).

Value range: 0..2
Initial value: 0

Command HP

<id>HP<para5> Lowest heating level (Heating Power) at which the heating system starts up
Access: Configuration mode (ADMIN)
Description: This command is used to specify the minimum heating power level in %. This command is only active when heating control (see Command HT) is switched on.

Parameter description:

- 0: the heating capacity starts at 1%, and increases depending on the wind velocity and falling temperature
- 10: the heating capacity starts always at minimum 10%, and increases depending on the wind velocity and falling temperature

Value range: 0..100
Initial value: 10

Command HS

<id>HS<para5> Height Settings
Access: Configuration mode (ADMIN)
Description: This command determines if the station height is set manually by the command "SH", or automatically acc. to GPS level. The station height is necessary for the calculation of the air pressure on sea level.

Parameter description:

- 0: the station height is set to "SH", and is not readjusted by GPS.
- 1: the station height is averaged, and is stored after 14 days as fixed "SH" parameter, the parameter "HS" is reset afterwards.
- 2: as 1, however the parameters are not stored permanently, the height averaging starts again after each re-start.
- 3: sets the station height acc. to the instantaneous value of the GPS receiver

Value range: 0..3
Initial value: 1 (only article: 4.9200.xx.xxx and 4.9202.xx.xxx)

Command HT

<id>HT<para5> Heating control (Heating)
Access: Configuration mode (ADMIN)
Description: In order to avoid a malfunction of the precipitation radar and the brightness sensors, caused by snowfall and ice formation, the Climasensor Ultrasonic is equipped with a cover heating.

Parameter description:

- 0: Heating always off
- 1: Heating switches on with air temperatures below 2.5°C
- 2: Heating permanently on with a heating power level of 50%
This setting should only be used for testing and switches back automatically to "1" when parameters are saved.

Value range: 0..2
Initial value: 1

Command ID

<id>ID<para5> CLIMA SENSOR US devices (IDentifier)
Access: Configuration mode (ADMIN)
Description: This command is used to specify the identification number of the CLIMA SENSOR US. The ID is required to address the CLIMA SENSOR US with every command. Whenever its ID is changed, the CLIMA SENSOR US will respond to its new identifier immediately.
The ID 99 is a universal ID. Every CLIMA SENSOR US will always respond to commands with the ID 99 (with the correct baud rate).
The ID 99 must not be used in bus mode under any circumstances.

Example:

00KY04711	Open with user key
00ID00023	Change ID from 0 to 23
!00ID00023	CLIMA SENSOR US acknowledges change
23DM	Query of duplex mode with new ID
!23DM00000	Response from CLIMA SENSOR US
23ID00000	Change ID from 23 to 0
!23ID00000	CLIMA SENSOR US acknowledges change

Value range: 0..99
Initial value: 0

Command KY

<id>KY<para5> Access mode (Key)
Access: Query mode
Description: When editing the parameters of the CLIMA SENSOR US access authorisations are required for most commands. This prevents any accidental change in parameters. Access consists of three levels:

- Query mode "0"
- User mode "1"
- Configuration mode "4711"

Parameter description:

0: Query mode
Parameters which have no access restrictions are those not stored in the EEPROM, e.g. cyclic telegram enquiry or output of system status.

1: User mode (USER ACCESS)
The user key protects parameters which influence the behaviour of the CLIMA SENSOR US, e.g. averaging period and baud rate. The user can change these parameters but should realise that this will modify the behaviour of the CLIMA SENSOR US.
Before any change it is recommended using the command SS to output and then save the current configuration.

4711: Configuration mode (ADMIN ACCESS)
Parameters protected with this key are only available to the administrator. They were set as defaults at the factory.
If the user switches from a higher to a lower access mode with a command, e.g.: with "00KY0", the edited parameters will be permanently stored in the EEPROM. Query mode is always switched on after a restart.

Value range: 0,1,4711
Initial value: 0

Command MD

<id>MD>>para5> Measuring interval of the complete wind measurement (Measurement Delay)
Access: Configuration mode (ADMIN)
Description: Specifies the time in increments of 10ms from the start of one measuring cycle (4 TOF) to the start of the next. In standard mode the time is 20ms so that a complete data record is generated from all sensors every 20ms.

Value range: 0..30000
Initial value: 2

Command NC

<id>NC<para5> Correction to north of wind direction (North Correction)
Access: Configuration mode (ADMIN)
Description: With the north correction a constant angle is added to the measured wind direction. The parameter is used to correct electronically a possible alignment error subsequently after mounting. If the CLIMA SENSOR, for example, is not aligned directly to north but to northeast, the wind direction always indicates 45° too little. In this case a north correction of 45 must be set.
North correction influences the wind directions output in the data telegrams as well as the analogue output values.

Value range: 0..359 in increments of 1°
Initial value: 0

Command OL

<id>OL<para5>	Output link (Output Link)																				
Access:	Configuration mode (ADMIN)																				
Description:	This command can be used to link optional measured values to the analogue outputs 4-8.																				
Parameter:	<table><tr><td>1:</td><td>linked to relative humidity</td></tr><tr><td>2:</td><td>linked to air pressure</td></tr><tr><td>3:</td><td>linked to brightness from north</td></tr><tr><td>4:</td><td>linked to brightness from east</td></tr><tr><td>5:</td><td>linked to brightness from south</td></tr><tr><td>6:</td><td>linked to brightness from west</td></tr><tr><td>7:</td><td>linked to brightness (see Command BO)</td></tr><tr><td>8:</td><td>linked to direction of brightness or resp. azimuth (see command DO)</td></tr><tr><td>9:</td><td>linked to precipitation intensity</td></tr><tr><td>0:</td><td>linked to precipitation event</td></tr></table> <p>The position of the parameter from left to right describes the numbers 4-8 of the relevant output.</p> <p>Example: OL=12789 means: output 4 (PIN:N) = relative humidity output 5 (PIN:C) = air pressure output 6 (PIN:B) = brightness output 7 (PIN:A) = direction of brightness output 8 (PIN:P) = precipitation intensity</p> <p>Note: The first 3 measured values have fixed linking to the analogue outputs, cannot be changed and are linked as follows: output 1 (PIN:T) = wind speed output 2 (PIN:S) = wind direction output 3 (PIN:O) = temperature / virtual temperature</p>	1:	linked to relative humidity	2:	linked to air pressure	3:	linked to brightness from north	4:	linked to brightness from east	5:	linked to brightness from south	6:	linked to brightness from west	7:	linked to brightness (see Command BO)	8:	linked to direction of brightness or resp. azimuth (see command DO)	9:	linked to precipitation intensity	0:	linked to precipitation event
1:	linked to relative humidity																				
2:	linked to air pressure																				
3:	linked to brightness from north																				
4:	linked to brightness from east																				
5:	linked to brightness from south																				
6:	linked to brightness from west																				
7:	linked to brightness (see Command BO)																				
8:	linked to direction of brightness or resp. azimuth (see command DO)																				
9:	linked to precipitation intensity																				
0:	linked to precipitation event																				
Value range:	0...99999																				
Initial value:	12789																				

Command OR

<id>OR<para5>	Telegram output interval (Output Rate)		
Access:	Configuration mode (ADMIN)		
Description:	When the telegram output is autonomous, the time distance between the telegrams is specified by means of this parameter. The selection is carried out in increments of milliseconds. If the output rate is higher than the data transmission speed, the upcoming output is rejected. If the output repetition rate is several times faster than the measuring value acquisition, the available measuring values are double- or multiple-output.		
Parameter description:	<table><tr><td>10..10000</td><td>Specifies the output interval in milliseconds.</td></tr></table>	10..10000	Specifies the output interval in milliseconds.
10..10000	Specifies the output interval in milliseconds.		
Value range:	0..10000 [ms]		
Initial value:	100 (see factory setting: supplement sheet)		

Command OS

<id>OS<para5>

Access:

Description:

Meas. Unit of the wind speed output (Output Scale)

Configuration mode (ADMIN)

This command specifies the unit used for output of the wind speed in the serial telegram. Different units of measurement are available for this purpose.

Parameter description:

Parameter	Meas. unit	Conversion factor referred to m/s
0	m/s	1
1	Km/h	1m/s => 3.6 km/h
2	miles/h	1m/s => 2.236936292 miles/h
3	Knots	1m/s => 1.94253590 knots

Table 12: Conversion factors between different wind speeds

Value range:

0..3

Initial value:

0

Command PT

<id>PT<para5>

Access:

Description:

Precipitation threshold for the precipitation status flag.

Configuration mode (ADMIN)

Sets the threshold of the precipitation intensity in μm , when the status flag is set to "1". In addition, the status flag can be linked to a precipitation event counter.

Parameter description:

0..200

Threshold of the intensity in $\mu\text{m}/\text{h}$. From this threshold on, or through the event counter the status flag is adjusted.

1001..1200

The status flag is set from precipitation intensity: 1..200.

Initial value:

0 (highest sensitivity)

Command RD

<id>RD<para5>

Access:

Description:

Delayed response (Response Delay)

Configuration mode (ADMIN)

The response of the CLIMA SENSOR US is delayed by the time specified in ms with a command via the serial interface.

The minimum delay time from the end of the last character of the request telegram until transmission of the first character of the response telegram is 5ms.

Value range:

5...1000 [ms]

Initial value:

5

Command RS

<id>RS<para5>

Access:

Description:

Warm-boot CLIMA SENSOR US (Reset)

Configuration mode (ADMIN)

The CLIMA SENSOR US is restarted on transmission of this command.

Parameter description:

1:

The CLIMA SENSOR US performs a warm boot, behaving as if the supply voltage had just been connected.

2:

The CLIMA SENSOR US no longer operates the watchdog. This results in a restart after approx. 11 seconds (watchdog test function).

Value range:

1..2

Command RT

<id>RT<para7> Used to set the real-time clock of the CLIMA SENSOR US (Real Time)
Access: Configuration mode (ADMIN)
Description: Output and setting of time and date of CLIMA SENSOR US.

Parameter description:

- 0: Synchronization of date and time deactivated by GPS information.
- 1: Synchronizes seconds acc. to GPS every day at 3:30:30 h.
- 2: Synchronizes seconds and minutes by GPS every day at 3:30:30 h.
- 3: Synchronizes time and date by GPS every day at 3:30:30 h.
- T: System time of CLIMA SENSOR US output in the format: "**hh:mm:ss**".
Example for setting the system time to 12 noon: "00RTT120000"
- D: System date of CLIMA SENSOR US output in the format: "**dd:mm:yy**".
Example for setting the date to 25.09.2012: "00RTD250912"
- G: One-off setting of the time and date acc. to GPS information (optional).
Time and date are set automatically if a valid GPS time is received (s.a. Command "TZ" Time Zone).
- S: Minutes and seconds synchronised to GPS time.
Time and date are set automatically if a valid GPS time is received.

Command SH

<id>SH<para5> Station height to calculate the air pressure at standard elevation zero (NHN)
Access: Configuration mode (ADMIN)
Description: Input of the station height in meters above sea level for conversion of the air pressure to sea level.
For an automatic setting of the station height see parameter "HS".

Parameter description:

- 0...9000: station height in meters (basis for conversion of the air pressure to sea level)

Value range: 0

Command SN

<id>SN Output of 8-digit serial number (Serial Number)
Access: Query mode
Description: During factory setting of the device every CLIMA SENSOR US is given a serial number. This serial number is a unique identifier for the CLIMA SENSOR US.

Parameter description:

The CLIMA SENSOR US responds e.g. with the serial number "12345678":
!00SN12345678
Serial number: 12345678 (see also **Command HH** "Verbose ON")

Value range: 0..99999999

Command SS

<id>SS<para5> System status (System Status)
Access: Query mode
Description: Outputs the selected parameters of all commands. All parameters stored in the EEPROM are output here.
Before editing parameters of the CLIMA SENSOR US, this command should be used to generate and save a list of the selected parameters, e.g. by copying the parameters to a text file.

Parameter description:

No parameter is necessary when using the command SS. Call-up with the selected device ID 00 is as follows:

00SS<cr> with <cr> Carriage return (Enter key)

Command SU

<id>SU<para5> Preparation for firmware upload (Software Upload)
Access: Configuration mode (ADMIN)
Description: Starts the on-chip bootloader to prepare for the firmware update.
A firmware upload takes approx. 2min at a maximum baud rate of 115200 baud.
No more than 2 minutes should pass from initiation of this procedure to the firmware upload as the CLIMA SENSOR US will automatically restart after 10 min in total, regardless of whether the upload is complete.
Abort may cause the CLIMA SENSOR US to stop responding to commands. In this case it has to be sent in to the manufacturer.
The upload baud rate is independent from the communication baud rate (see BR) and is determined by the upload program „Flash-Magic“. The recommended upload baud rate is 115200 Bd, and must not be set below 38400 Bd, so that an upload is not interrupted by the 10 min timeout. For a firmware update a full-duplex-(4-wire) connection is required.

Command SV

<id>SV<para5> Version of software (Software Version)
Access: Query mode
Description: Without parameter the command outputs the software version.

Parameter description:

1: Output of the start message with the software version

Command TA

<id>TA Thies article number
Access: Query mode
Description: Without parameter the factory-determined Thies article number is output without the leading 4 e.g.. 920000000, for 4.9200.00.000

Parameter description:

1: output of the first 5 characters of the Thies article number e.g. „49200“
2: output of the last 5 characters of the Thies article number, e.g. „00000“

Command TI

<id>TI<para5> Telegram information
Access: Query mode
Description: Telegram information about the type of measured value is output in abbreviated form
Value range: 1,2,3,4,5,6,14 valid telegrams; see also **Command TR**.

Command TR

<id>TR<para5> Telegram request (Telegram Request)
Access: Query mode
Description: The command TR can be used to specifically request a telegram from the CLIMA SENSOR US. The device offers a series of predefined telegrams. With a telegram request the response time of the CLIMA SENSOR US is the delay time from the last character of the request telegram until transmission of the first character of the response telegram. The minimum delay is 5msec and can be selected from 5...1000 ms using Command RD.

Parameter description:

- 1: VDT telegram (wind speed, wind direction and temperature)
- 2: VDTHP telegram (wind speed, wind direction, temperature, relative humidity and air pressure)
- 3: VDTBDRE telegram (wind speed, wind direction, temperature, brightness, Brightness direction, precipitation intensity / status)
- 4: VDTHPBDRE (wind speed, wind direction, temperature, relative humidity, air pressure, brightness, brightness direction, precipitation intensity / status)
- 5: NMEA V2.0
- 14: Scientific diagnostics telegram

Value range: 1,2,3,4,5,14
Initial value: No initial value

Command TT

<id>TT<para5> Autonomous telegram output (Telegram Transmission)
Access: User mode
Description: Specifies the number of the telegram that the CLIMA SENSOR US autonomously transmits on a cyclic basis. The same telegrams are available as described under **Command TR**. The time interval in which telegrams are transmitted is specified with **Command OR**.
Autonomous transmission is only possible in full duplex mode; see **Command DM**.
If TT = 0, autonomous telegram output is switched off.

Value range: 1,2,3,4,5,14
Initial value: see factory settings on the supplement sheet

Command TZ

<id>TZ<para5> Setting of the instrument on local time by entering the time difference to UTC
Access: Configuration mode (ADMIN)
Description: Selects an hourly offset of the local time to the UTC time of the GPS time signal. Is required for automatic time / date setting with the command "RTG".

Parameter description:

- 0: no time correction
- 23: UTC time -1 hour
- 24: UTC time
- 25: UTC time +1hour

Value range: 0..47
Initial value: 0

10 Appendix 1 Predefined data telegrams

10.1 Telegram 1 VDT

Wind speed, Wind direction and Temperature

Command: TR1 / Command: TT1 (with DT=0, see also Command DT)

Telegram structure:

Position	Length	Example	Description	Meas. error
1	1	<STX>	Start of Text character (HEX 02)	<STX>
2	5	###.#	Wind speed unit [m/s], see Command OS	FFF.F
7	1	' '	Blank character (HEX 20)	' '
8	3	###	Wind direction [°]	FFF
11	1	' '	Blank character (HEX 20)	' '
12	5	###.#	Temperature [°C]	FFF.F
17	1	' '	Blank character (HEX 20)	' '
18	1	*	Asterisk (identifier for following check sum)	'*'
19	2	CC	Check sum (XOR)	CC
21	1	<CR>	Carriage return (HEX 0D)	<CR>
22	1	<ETX>	End of TeXt character (HEX 03)	<ETX>

Extension of telegram possible to include date and time; s. section 9, Command DT.

10.2 Telegram 2 VDTHP

Wind speed, Wind direction, Temperature, Relative humidity and Air pressure

Command: TR2 / Command: TT2 (with DT=0, see also Command DT)

Telegram structure:

Position	Length	Example	Description	Meas. error
1	1	<STX>	Start of Text character (HEX 02)	<STX>
2	5	###.#	Wind speed unit [m/s], see Command OS	FFF.F
7	1	' '	Blank character (HEX 20)	' '
8	3	###	Wind direction [°]	FFF
11	1	' '	Blank character (HEX 20)	' '
12	5	###.#	Temperature [°C]	FFF.F
17	1	' '	Blank character (HEX 20)	' '
18	3	###	Relative humidity [%]	FFF
21	1	' '	Blank character (HEX 20)	' '
22	6	####.#	Air pressure [hPa]	FFF.F
28	1	' '	Blank character (HEX 20)	' '
29	1	*	Asterisk (identifier for following check sum)	'*'
30	2	CC	Check sum (XOR)	CC
32	1	<CR>	Carriage return (HEX 0D)	<CR>
33	1	<ETX>	End of TeXt character (HEX 03)	<ETX>

Missing measuring values by partial expansion stage are marked by „F“ as „measuring value error“. Extension of telegram possible to include date and time; s. section 9, Command DT.

10.3 Telegram 3 VDTBDRE

Wind speed, Wind direction, Temperature, Brightness, Brightness direction, Precipitation intensity / status

Command: TR3 / Command: TT3 (with DT=0, see also Command DT)

Telegram structure:

Position	Length	Example	Description	Meas. error
1	1	<STX>	Start of Text character (HEX 02)	<STX>
2	5	###.#	Wind speed unit [m/s], see Command OS	FFF.F
7	1	' '	Blank character (HEX 20)	' '
8	3	###	Wind direction [°]	FFF
11	1	' '	Blank character (HEX 20)	' '
12	5	###.#	Temperature [°C]	FFF.F
17	1	' '	Blank character (HEX 20)	' '
18	6	#####	Brightness max. / vectorial sum [lux] (s. Command BO)	FFFFFF
24	1	' '	Blank character (HEX 20)	' '
25	3	###	Direction of brightness [°]	FFF
28	1	' '	Blank character (HEX 20)	' '
29	7	###.###	Precipitation intensity [mm/h]	FFF.FFF
36	1	' '	Blank character (HEX 20)	' '
37	1	#	Precipitation event [0/1]	F
38	1	' '	Blank character (HEX 20)	' '
39	1	*	Asterisk (identifier for following check sum)	'*'
40	2	CC	Check sum (XOR)	CC
42	1	<CR>	Carriage return (HEX 0D)	<CR>
43	1	<ETX>	End of TeXt character (HEX 03)	<ETX>

Missing measuring values by partial expansion stage are marked by „F“ as „measuring value error“. Extension of telegram possible to include date and time; s. section 9, Command DT.

10.4 Telegram 4 VDTHPBDRE

Wind speed, Wind direction, Temperature, Relative humidity, Air pressure, Brightness, Brightness direction, Precipitation intensity / status

Command: TR4 / Command: TT4 (with DT=0, see also Command DT)

Telegram structure:

Position	Length	Example	Description	Meas. error
1	1	<STX>	Start of Text character (HEX 02)	<STX>
2	5	###.#	Wind speed unit [m/s], see Command OS	FFF.F
7	1	' '	Blank character (HEX 20)	' '
8	3	###	Wind direction [°]	FFF
11	1	' '	Blank character (HEX 20)	' '
12	5	###.#	Temperature [°C]	FFF.F
17	1	' '	Blank character (HEX 20)	' '
18	3	###	Relative humidity [%]	FFF
21	1	' '	Blank character (HEX 20)	' '
22	6	#####	Air pressure [hPa]	FFFF.F
28	1	' '	Blank character (HEX 20)	' '
29	6	#####	Max. brightness / vectorial sum [lux] (s. Command BO)	FFFFF
35	1	' '	Blank character (HEX 20)	' '
36	3	###	Direction of brightness [°]	FFF

Position	Length	Example	Description	Meas. error
39	1	' '	Blank character (HEX 20)	' '
40	7	###.###	Precipitation intensity [mm/h]	FFF.FFF
47	1	' '	Blank character (HEX 20)	' '
48	1	#	Precipitation event [0/1]	F
49	1	' '	Blank character (HEX 20)	' '
50	1	*	Asterisk (identifier for following check sum)	'*'
51	2	CC	Check sum (XOR)	CC
53	1	<CR>	Carriage return (HEX 0D)	<CR>
54	1	<ETX>	End of TeXt character (HEX 03)	<ETX>

Missing measuring values by partial expansion stage are marked by „F“ as „measuring value error“. Extension of telegram possible to include date and time; s. section 9, Command DT.

10.5 Telegram 5 NMEA - WIND

NMEA V 2.0

Command: TR5 / Command: TT5

Telegram structure:

Position	Length	Example	Description
1	6	\$WIMWV	NMEA identifier
7	1	,	Comma (HEX 2C)
8	5	DDD.D	Wind direction [°]
13	1	,	Comma (HEX 2C)
14	1	R	(HEX 52)
15	1	,	Comma (HEX 2C)
16	5	VVV.V	Wind speed
21	1	,	Comma (HEX 2C)
22	1	U	Unit: K, N, M, S = km/h, knots, m/s, mph
23	1	,	Comma (HEX 2C)
24	1	A	A, V A = valid, V = invalid
25	1	*	Check sum identifier (HEX 2A)
26	2	CC	Check sum in hexadecimal format
28	1	<CR>	Carriage return (HEX 0D)
29	1	<LF>	Line feed (HEX 0A)

Telegram structure in case of error:

Position	Length	Example	Description
1	6	\$WIMWV	NMEA identifier
7	1	,	Comma (HEX 2C)
8	1	,	Comma (HEX 2C)
9	1	R	(HEX 52)
10	1	,	Comma (HEX 2C)
11	1	,	Comma (HEX 2C)
12	1	U	Unit: K, N, M, S = km/h, knots, m/s, mph
13	1	,	Comma (HEX 2C)
14	1	A	A, V A = valid, V = invalid
15	1	*	Check sum identifier (HEX 2A)
16	2	CC	Check sum in hexadecimal format
18	1	<CR>	Carriage return (HEX 0D)
19	1	<LF>	Line feed (HEX 0A)

10.6 Telegram 6

Wind speed, Wind direction, Temperature, Relative humidity, Air pressure, Brightness, Brightness direction, Precipitation status / intensity and Daily total

Command: TR6 / Command: TT6 (with DT=0, see also Command DT)

Telegram structure:

Position	Length	Example	Description	Meas. error
1	1	<STX>	Start of Text character (HEX 02)	<STX>
2	5	####.#	Wind speed unit [m/s], see Command OS	FFF.F
7	1	' '	Blank character (HEX 20)	' '
8	3	###	Wind direction [°]	FFF
11	1	' '	Blank character (HEX 20)	' '
12	5	####.#	Temperature [°C]	FFF.F
17	1	' '	Blank character (HEX 20)	' '
18	3	###	Relative humidity [%]	FFF
21	1	' '	Blank character (HEX 20)	' '
22	6	####.#	Air pressure [hPa]	FFFF.F
28	1	' '	Blank character (HEX 20)	' '
29	6	#####	Brightness north [lux]	FFFFFF
35	1	' '	Blank character (HEX 20)	' '
36	6	#####	Brightness east [lux]	FFFFFF
42	1	' '	Blank character (HEX 20)	' '
43	6	#####	Brightness south [lux]	FFFFFF
49	1	' '	Blank character (HEX 20)	' '
50	6	#####	Brightness west [lux]	FFFFFF
56	1	' '	Blank character (HEX 20)	' '
57	6	#####	Brightness max. value / vectorial sum [lux] (s. Command BO)	FFFFFF
63	1	' '	Blank character (HEX 20)	' '
64	3	###	Direction of brightness [°]	FFF
67	1	' '	Blank character (HEX 20)	' '
68	1	#	Precipitation event [0/1]	F
69	1	' '	Blank character (HEX 20)	' '
70	7	####.## #	Precipitation intensity [mm/h]	FFF.FFF
77	1	' '	Blank character (HEX 20)	' '
78	6	####.##	Total precipitation [mm/d]	FFF.FF
84	1	' '	Blank character (HEX 20)	' '
85	2	##	Synop (Table 1, section 3.5.2)	FF
87	1	' '	Blank character (HEX 20)	' '
88	1	*	Asterisk (identifier for following check sum)	*
89	2	CC	Check sum (XOR)	CC
91	1	<CR>	Carriage return (HEX 0D)	<CR>
92	1	<ETX>	End of TeXt character (HEX 03)	<ETX>

The precipitation sum [mm/d] is reset at 00:00 o'clock the next day!

Missing measuring values by partial expansion stage are marked by „F“ as „measuring value error“. Extension of telegram possible to include date and time; s. section 9, Command DT.

Wind speed, Wind direction, Temperature, Relative humidity, Air pressure, Brightness, Brightness direction, Precipitation status / Intensity and Daily total with GPS position and Time of day

Command: TR6 / Command: TT6 (preselected telegram with DT=6, see also Command DT)
Telegram structure:

Position	Length	Example	Description	Meas. error
1	1	<STX>	Start of Text character (HEX 02)	<STX>
2	5	###.#	Wind speed unit [m/s], see Command OS	###.#
7	1	' '	Blank character (HEX 20)	' '
8	3	###	Wind direction [°]	###
11	1	' '	Blank character (HEX 20)	' '
12	5	###.#	Temperature [°C]	###.#
17	1	' '	Blank character (HEX 20)	' '
18	3	###	Relative humidity [%]	###
21	1	' '	Blank character (HEX 20)	' '
22	6	####.#	Air pressure [hPa]	####.#
28	1	' '	Blank character (HEX 20)	' '
29	6	#####	Brightness north [lux]	#####
35	1	' '	Blank character (HEX 20)	' '
36	6	#####	Brightness east [lux]	#####
42	1	' '	Blank character (HEX 20)	' '
43	6	#####	Brightness south [lux]	#####
49	1	' '	Blank character (HEX 20)	' '
50	6	#####	Brightness west [lux]	#####
56	1	' '	Blank character (HEX 20)	' '
57	6	#####	Brightness max. value / vectorial sum [lux] (s. Command BO)	#####
63	1	' '	Blank character (HEX 20)	' '
64	3	###	Direction of brightness [°]	###
67	1	' '	Blank character (HEX 20)	' '
68	1	#	Precipitation event [0/1]	#
69	1	' '	Blank character (HEX 20)	' '
70	7	###.###	Precipitation intensity [mm/h]	###.###
77	1	' '	Blank character (HEX 20)	' '
78	6	###.##	Total precipitation [mm/d]	###.##
84	1	' '	Blank character (HEX 20)	' '
85	2	##	Synop (Table 1, section 3.5.2)	##
87	1	' '	Blank character (HEX 20)	' '
88	10	###.#####	Degree of latitude [°] (GPS position)	###.#####
98	1	' '	Blank character (HEX 20)	' '
99	11	####.##### #	Degree of longitude [°] (GPS position)	####.#####
110	1	' '	Blank character (HEX 20)	' '
111	4	####	Height of sensor referred to sea level [m]	####
115	1	' '	Blank character (HEX 20)	' '
116	5	###.#	Position of the sun, elevation [°] (-90°...+90°=zenith)	###.#
121	1	' '	Blank character (HEX 20)	' '
122	5	###.#	Position of the sun, azimuth [°] (0° = north ; 180° = south)	###.#
127	1	' '	Blank character (HEX 20)	' '

128	8	##.##.##	Date, day.month.year (dd.mm.yy)	##.##.##
136	1	' '	Blank character (HEX 20)	' '
137	8	##:##:##	Time of day, hour:minute:second (hh:mm:ss)	##:##:##
145	1	' '	Blank character (HEX 20)	' '
146	1	*	Asterisk (identifier for following check sum)	*
147	2	CC	Check sum (XOR, initial value HEX 00)	CC
149	1	<CR>	Carriage return (HEX 0D)	<CR>
150	1	<ETX>	End of TeXt character (HEX 03)	<ETX>

10.7 Telegram 14 Scientific telegram

Scientific diagnostics telegram

Command: TR14 / Command: TT14

Telegram structure:

Position	Length	Example	Description
1	5	VV.VV	Wind speed unit [m/s], see Command OS
6	1	;	Semicolon (HEX 3B)
7	5	DDD.D	Wind direction [°]
12	1	;	Semicolon (HEX 3B)
13	5	+VT.x	Virtual temperature [°C]
18	1	;	Semicolon (HEX 3B)
19	5	SNxxx	Propagation time converter 3 towards converter 1 (south to north)
24	1	;	Semicolon (HEX 3B)
25	5	WExxx	Propagation time converter 4 towards converter 2 (west to east)
30	1	;	Semicolon (HEX 3B)
31	5	NSxxx	Propagation time converter 1 towards converter 3 (north to south)
36	1	;	Semicolon (HEX 3B)
37	5	EWxxx	Propagation time converter 2 towards converter 4 (east to west)
42	1	;	Semicolon (HEX 3B)
43	2	BU	Measured value buffer content level 0..99%
45	1	;	Semicolon (HEX 3B)
46	1	H	Heating requirement
47	1	;	Semicolon (HEX 3B)
48	5	+RT.C	Calculated air temperature [°C]
53	1	;	Semicolon (HEX 3B)
54	5	+TT.S	Temperature uncompensated [°C]
59	1	;	Semicolon (HEX 3B)
60	5	HUM.S	Relative humidity uncompensated [%]
65	1	;	Semicolon (HEX 3B)
66	5	HUM.C	Calculated relative humidity [%]
71	1	;	Semicolon (HEX 3B)
72	6	PRESS.B	Air pressure [hPa]
78	1	;	Semicolon (HEX 3B)
79	6	brighN	Brightness north [lux]
85	1	;	Semicolon (HEX 3B)
86	6	brighE	Brightness east [lux]
92	1	;	Semicolon (HEX 3B)
93	6	brighS	Brightness south [lux]
99	1	;	Semicolon (HEX 3B)
100	6	brighW	Brightness west [lux]
106	1	;	Semicolon (HEX 3B)
107	6	br_sum	Brightness max. value / vectorial sum [lux] (s. Command BO)
113	1	;	Semicolon (HEX 3B)
114	3	ddd	Direction of brightness [°]
117	1	;	Semicolon (HEX 3B)
118	7	RRR.RRR	Precipitation intensity [mm/h]
125	1	;	Semicolon (HEX 3B)

126	1	#	Precipitation event [0/1]
127	1	;	Semicolon (HEX 3B)
128	5	+TT.n	Temperature in housing [°C]
133	1	;	Semicolon (HEX 3B)
134	4	VC.C	Supply voltage [V]
138	1	;	Semicolon (HEX 3B)
139	7	LCxxxxx	Internal counter [ms]
146	1	*	Asterisk (identifier for following check sum)
147	2	CC	Check sum (XOR, initial value HEX 00)
149	1	<CR>	Carriage return (HEX 0D)
150	1	<LF>	Line feed (HEX 0A)

Example of a telegram:

02.42;242.5;+24.8;20451;20380;20538;20530;99;0;+24.1;+24.3;022.2;022.4;1000.4;000924;000583;000331;000423;000924;015;000.000;0;+25.8;23.8;3210198*2F<CR><LF>

Extension of telegram possible to include date and time; s. section 9, Command DT:

00.21;320.8;+23.5;20548;20497;20533;20511;99;0;+22.8;+24.3;022.2;024.3;1000.4;000895;000561;000338;000442;000895;012;000.000;0;+25.8;23.8;3250229;20.02.13;14:28:33*21

Incorrect values are indicated by : "???.?" or "!!!.!" in the telegram.

11 Technical data

Wind speed	Measuring range	0.01 m/s...60 m/s Scaling of analogue output freely selectable	
	Accuracy	≤ 5 m/s:	± 0.3 m/s (rms - mean over 360°)
		5...60m/s:	± 3 % of measured value (rms - mean over 360°)
	Resolution	0.1 m/s:	in telegrams 1, 2, 3, 5, 6
		0.01 m/s:	in telegram 14
Wind direction	Measuring range	0...360°	
	Accuracy	± 2.0° with WS > 2 m/s	
	Resolution	1°:	in telegrams 1, 2, 3, 4, 6
		0.1°:	in telegrams 5, 14
Virtual temperature	Measuring range	-40°C ...+80°C	
	Accuracy	± 0.5 K	
	Resolution	0.1 K	
Air temperature	Measuring range	-40°C ...+80°C	
	Accuracy	± 0.3 K @ 25°C, ± 1.0 K above -40°C ...+80°C	
	Resolution	0.1 K	
	Long-term stability	< 0.04 K per year	
Air humidity, relative	Measuring range	0% ...100% relative humidity	
	Accuracy	± 1.8% of 10% ...90%, ± 3.0% of 0% ...100%	
	Long-term stability	< 0.5% per year	
	Resolution	0.1%	
Air pressure	Measuring range	300 hPa ...1100 hPa	
	Accuracy	± 0.25 hPa at +10...+35°C	
		± 1 hPa at -20...+60°C	
	Resolution	0.1 hPa	
	Long-term stability	< ± 1 hPa per year	
Brightness	Measuring range	1 lux ...150 klux	
	Accuracy	0,3% of relative measured value	
	Resolution	approx. 0,3% of measuring value	
Precipitation	Measuring range	0.001 mm/h ... 100 mm/h	
	Resolution	0.001 mm/h	
	Droplet size	0.25 mm to 5.0mm, large as hail	
	Reproducibility	typ. > 98%	
	Type of precipitation	Rain, snow, sleet, ice crystals, hail	
Data output digital	Interface	RS 485 / RS 422 Electrically isolated from supply	
	Baud rate	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600 selectable	
	Output	Instantaneous values, sliding means from 100 msec to 2 min in increments of 100 msec freely selectable	
	Output rate	One per 10 msec to one per 10 seconds in increments of 1 msec freely selectable	






	Protocol	ASCII- Thies-Format and MODBUS RTU
Data output analogue	Electrical outputs	0... 10 V Electrically isolated from supply
		Permissible burden on voltage output: $\geq 2000\Omega$
	Output	Instantaneous values, sliding means from 100 msec to 2 min in increments of 100 msec freely selectable
	Output rate	Update rate 10 msec
	Resolution	16 bit
General	Internal measuring rate	Wind: up to 1000 propagation time measurements per second, up to 250 complete measuring sequences/second incl. calculations Temperature, humidity, pressure, precipitation, brightness: updated 1x a second
	Bus mode	Bus mode with up to 99 devices possible
	Firmware update	Firmware update in full duplex mode via RS422
	Temperature range	Operating temperature -30 ... +70°C Storage temperature -55 ... +80°C
Operating voltage	Supply without cover heating	6V...60 V DC or 10...42 V AC 50Hz / 60Hz typ. 50 mA @ 24V
Operating voltage	Supply with cover heating	24 V AC/DC $\pm 15\%$, 25 VA typically @ 24 V nominal (execution only 4.9200.00.00x, 4.9202.00.00x)
	Type of protection	IP 67 (when mounted correctly, see section "Preparation for operation")
Housing	4.92xx.xx.xxx	Plastic: LEXAN (polycarbonate, UV-stabilised) impact and weather-resistant
	Mounting	e.g. on mast tube R1½" (Ø 48.3 mm)
	Type of connection	19-pin plug connection
	Weight	approx. 900g (full version)

12 Accessories (available as optional features)

Connecting cable, complete	509311	10 m, 16-pin cable (16x0.25) with socket outlet on transmitter side
Connecting cable, complete	509427	10 m, 8-pin cable (8x0.25) with socket outlet on transmitter side
PC program Meteo- Online	9.1700.98.001	For visualising and archiving measured data on a PC with WIN7
Interface converter	9.1702.40.000	For signal conversion: RS422 to USB
Power supply unit	9.3389.20.000	For power supply to the CLIMA SENSOR US Primary: 230 V AC / 115 V AC Secondary: 24 V AC, 30 VA
Lightning rod	4.3100.99.000	To protect the sensors.

Other accessories available on request

13 Dimension drawing

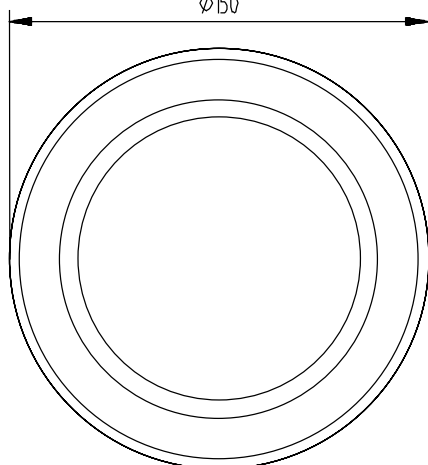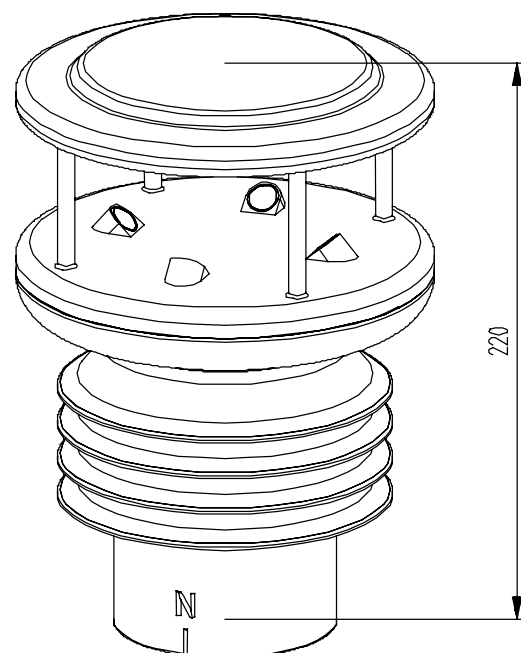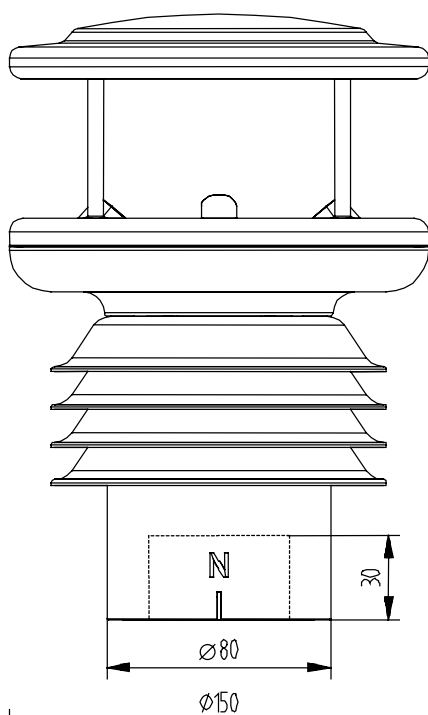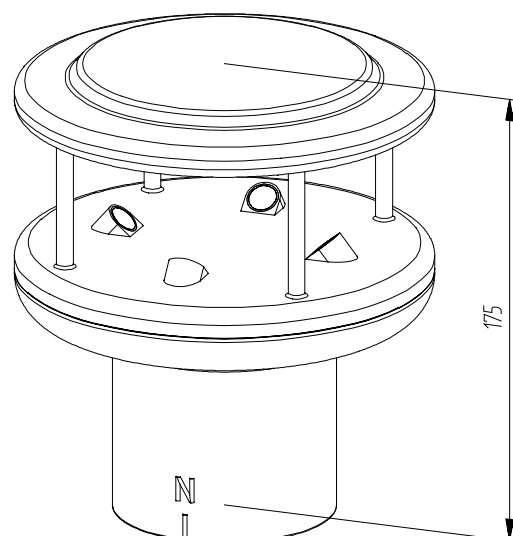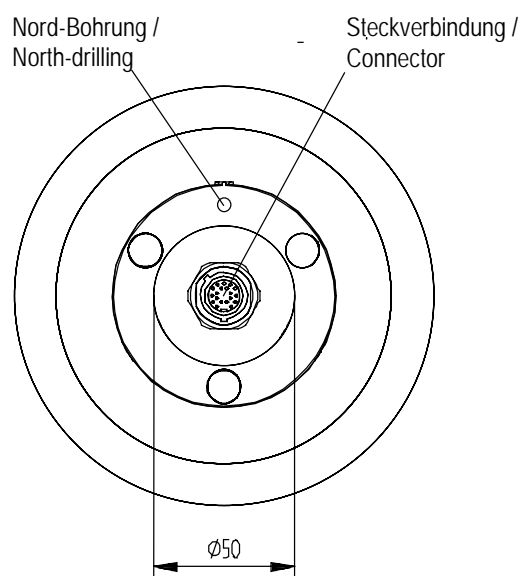

14 EC Declaration of Conformity

Document-No.: **000608** Month: 12 Year: 13
Manufacturer: **ADOLF THIES GmbH & Co. KG**
Hauptstr. 76
D-37083 Göttingen
Tel.: (0551) 79001-0
Fax: (0551) 79001-65
email: Info@ThiesClima.com

Description of Product: **Ultrasonic Anemometer 2D compact**

Article No.	4.9200.00.000	4.9201.00.000	4.9202.00.000	4.9203.00.000
	4.9200.00.001	4.9201.00.001	4.9202.00.001	4.9203.00.001

specified technical data in the document: **021689/11/13**

The indicated products correspond to the essential requirement of the following European Directives and Regulations:

- 2004/108/EC DIRECTIVE 2004/108/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 15 December 2004 on the approximation of the laws of the Member States relating to electromagnetic compatibility and repealing Directive 89/336/EEC
- 2006/95/EC DIRECTIVE 2006/95/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 12 December 2006 on the harmonisation of the laws of Member States relating to electrical equipment designed for use within certain voltage limits
- 552/2004/EC Regulation (EC) No 552/2004 of the European Parliament and the Council of 10 March 2004 on the interoperability of the European Air Traffic Management network (the interoperability Regulation)

The indicated products comply with the regulations of the directives. This is proved by the compliance with the following standards:

Reference number	Specification
EN61000-6-2:2005	Electromagnetic compatibility Immunity for industrial environment
EN61000-4-4:2002 level 4 4kV	Electromagnetic compatibility (EMC) – Part 4-4: Testing and measurement techniques – Electrical fast transient/burst immunity test
EN61000-4-5:2001 level 4 4kV	Electromagnetic compatibility (EMC) – Part 4-5: Testing and measurement techniques – Surge immunity test
EN61000-6-3:2006	Electromagnetic compatibility Emission standard for residential, commercial and light industrial environments
EN61010-1:2010	Safety requirements for electrical equipment for measurement, control and laboratory use. Part 1: General requirements
IEC 60945: 2002	Maritime navigation and radiocommunication equipment and systems Part 8.7 Vibration Part 8.12 Test Kb: Salt mist, cyclic (sodium, chloride solution) Part 9 Test of emission Part 10 Test of immunity Part 11.2 Safe distance to magnetic-compass Part 12.1 Degrees of protection provided by enclosures

Place: Göttingen

Date: 17.12.2013

Legally binding signature:

issuer:

.....
Wolfgang Behrens, General Manager

.....
Joachim Beinhorn, Development Manager

This declaration certifies the compliance with the mentioned directives, however does not include any warranty of characteristics.
Please pay attention to the security advises of the provided instructions for use.



ADOLF THIES GmbH & Co. KG

Hauptstraße 76 37083 Göttingen Germany
P.O. Box 3536 + 3541 37025 Göttingen
Phone +49 551 79001-0 Fax +49 551 79001-65
www.thiesclima.com info@thiesclima.com



- Alterations reserved-