


Instruction for Use

020810/11/06

Evaporimeter according Piche 6.1425.00.000 / 001

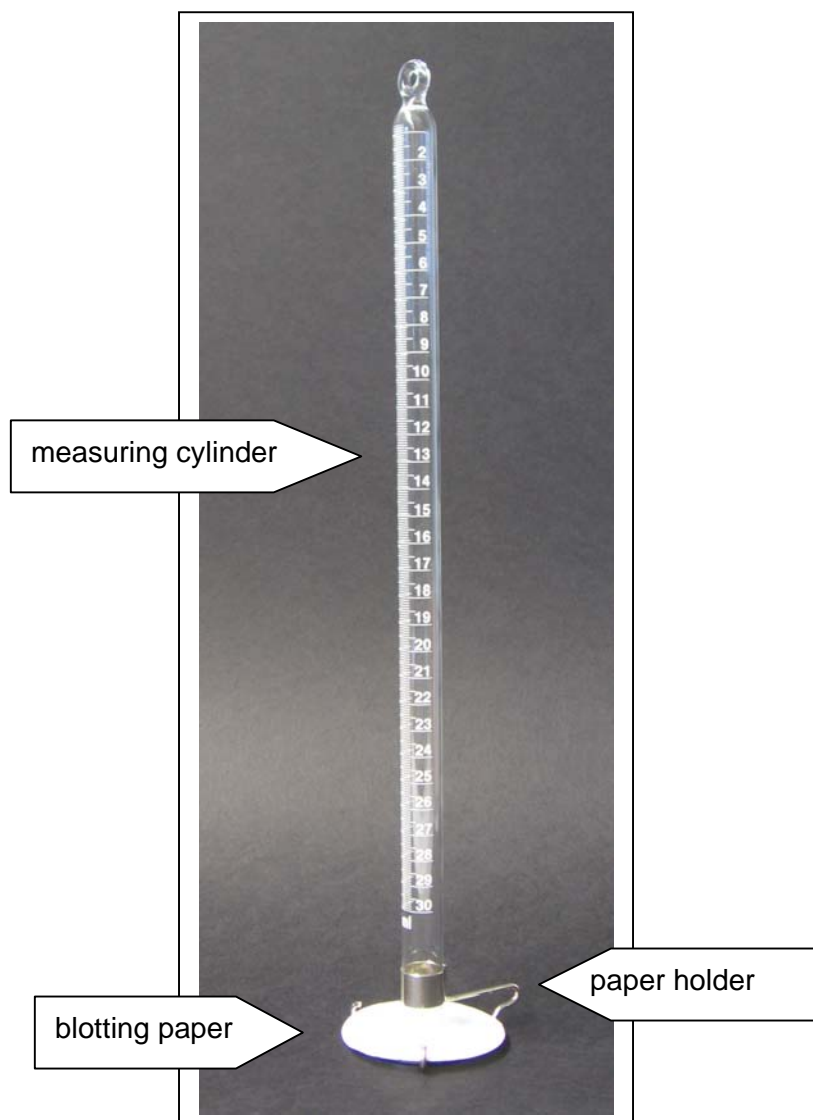

ADOLF THIES GmbH & Co. KG

Hauptstraße 76

Box 3536 + 3541

Phone ++551 79001-0

www.thiesclima.com

37083 Göttingen Germany

37025 Göttingen

Fax ++551 79001-65

info@thiesclima.com

1 Technical Data

| | 6.1425.00.000 | 6.1425.00.001 |
|--------------------------|----------------------------|----------------------------|
| Meas. range / graduation | 0... 30 ml / 0,1 ml | 0... 30 ml / 0,1 ml |
| Evaporation surface | Approx. 30 cm ² | Approx. 10 cm ² |
| Filling capacity | Approx. 36 ml | Approx. 36 ml |
| Blotting paper | Ø 55 mm | Ø 33 mm |
| measuring cylinder | Glass | Glass |
| Dimension | 325 mm long, Ø 14 mm | 325 mm long, Ø 14mm |
| Weight | 0.1 kg | 0.1 kg |

2 Description

This instrument is used to determine the evaporation, which occurs on a moistened porous paper filter.

It consists of a measuring cylinder, which is sealed on one end open on the other. The open end is closed off with blotting paper situated beneath the tube starts to evaporate. This evaporation is compensated for by the water in the measuring tube. The amount which has evaporated can be read on the measuring scale.

3 Preparation for Use

Fill the measuring tube - with the opening towards the top - completely full of water (distilled water, if possible). Soak the blotting paper in water, prick a hole in it with a pin, then place it on the opening of the measuring tube and press it against the tube by pushing the paper holder. Turn the instrument over and hang it up by means of the mounting ring. It is now ready for use.

Refill the tube with water and change the filter paper daily.

4 Accessories

Blotting paper Ø 55 mm Order- No. 205270 (1 Set consists of 100 Sheets)

Blotting paper Ø 33 mm Order- No. 205271 (1 Set consists of 100 Sheets)

| | | | |
|--|--|--|---|
|  | ADOLF THIES GmbH & Co. KG |  |  |
| | Hauptstraße 76 37083 Göttingen Germany P.O. Box 3536 + 3541 37025 Göttingen Phone ++551 79001-0 Fax ++551 79001-65 www.thiesclima.com info@thiesclima.com | | |

- Alterations reserved -