

Instruction for Use

021106/02/07

Wind Direction Transmitter - compact

- with 2-Bit parallel output-
4.3128.01.000



ADOLF THIES GmbH & Co. KG

Hauptstraße 76

Box 3536 + 3541

Phone ++551 79001-0

www.thiesclima.com

37083 Göttingen Germany

37025 Göttingen

Fax ++551 79001-65

info@thiesclima.com

Contents

1	Models available	3
2	Application	3
3	Construction and Mode of Operation	3
4	Recommendation Side Selection/Standard Installation	4
5	Installation.....	4
5.1	Mechanical Mounting	4
5.2	Electrical Mounting	4
6	Maintenance	5
7	Connecting Diagram	5
8	Technical Data.....	6
9	Dimensional Drawing	6
10	Accessories	7

Figures

Figure 1:	Dimensional Drawing: Wind direction transmitter.....	6
-----------	--	---

1 Models available

Order-No.	Meas. range	Electr. Output	Heating capacity	Connection
4.3128.00.000	0 ... 360°	2- Bit Gray-Code (parallel)	20 W	5 m cable LiYCY 8 x 0,25 mm ²

2 Application

The wind direction transmitter is designed for the acquisition of the horizontal wind direction. The measuring values are output as electrical digital signals, for example for processing or storing.

An electronically-regulated heating system has been installed optionally for wintertime use, in order to prevent a blocking of the gap between the external rotation parts by ice aggregation.


Power for the heating system could be provided for instance by our Power Supply Unit, Order No. 9.3388.00.000.

3 Construction and Mode of Operation

The outer parts of the instrument are made of corrosion-resistant material (aluminum, stainless steel, plastic). The aluminum parts are additionally protected by means of an anodic coat. Labyrinth sealing protects sensitive parts inside the instrument against humidity.

The wind direction is detected by means of a low-inertia wind vane, the ball bearing axis of which is connected to a code disc. This code disc contains a Gray-code which is scanned opto-electronically, and is available at the output as parallel code.

Kabel	0 – 90°	90 – 180°	180 – 270°	270 – 360°	Bit
(3) green	1	1	0	0	1
(2) brown	1	0	0	1	0

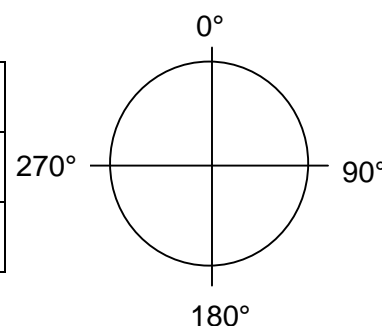

4 Recommendation Side Selection/Standard Installation

In general wind measurement instruments should be able to detect the wind conditions of a large area. In order to obtain comparable values when determining the surface wind, measurements should be taken at a height of 10 meters over an even unobstructed area. An unobstructed area means that the distance between the wind transmitter and an obstacle should be at least 10 times the height of the obstacle (s. VDI 3786). If it is not possible to fulfil this condition, then the wind transmitter should be set up a height where local obstacles do not influence the measured values to any significant extent (approx. 6-10 m above the obstacle).

The wind transmitter should be set up in the centre of flat roofs and not on the roof side in order to avoid bias in the direction (privileged directions).

5 Installation

Attention:

Storing, mounting and operation under weather conditions is permissible only in vertical position, as otherwise water can get into the instrument.

Remark:

When using fastening adapters (angle, traverses, hangers etc.) please take a possible effect by turbulences into consideration.

5.1 Mechanical Mounting

The mounting of the transmitter could be done for example at a traverse with a boring of PG 21 or on hangers with a boring of 29 mm Ø. (for ex. traverse *compact*, order-no. 4.3171.30.000). The connection cable or connecting plug is passed through the boring, and the wind direction transmitter is fixed with hexagonal nut (SW36) after the north alignment.

North Alignment

Rotate the case markings (north marking) on the shaft and on the protective cap until they are aligned. Then select an obvious point in a northerly direction in the surroundings (a tree, a building etc.) with the aid of a compass. Take a bearing on this point over the wind vane and the counter weight of the wind direction transmitter, and when these coincide screw the wind transmitter into place. (the north marking must indicate to the geographic north).

5.2 Electrical Mounting


For electrical connection please refer to the connecting diagram.

6 Maintenance

After proper mounting the instrument works maintenance free.

Heavy pollution can clog up the slit between the rotating and the stationary parts of the wind transmitter. This slit must be kept clean.

7 Connecting Diagram

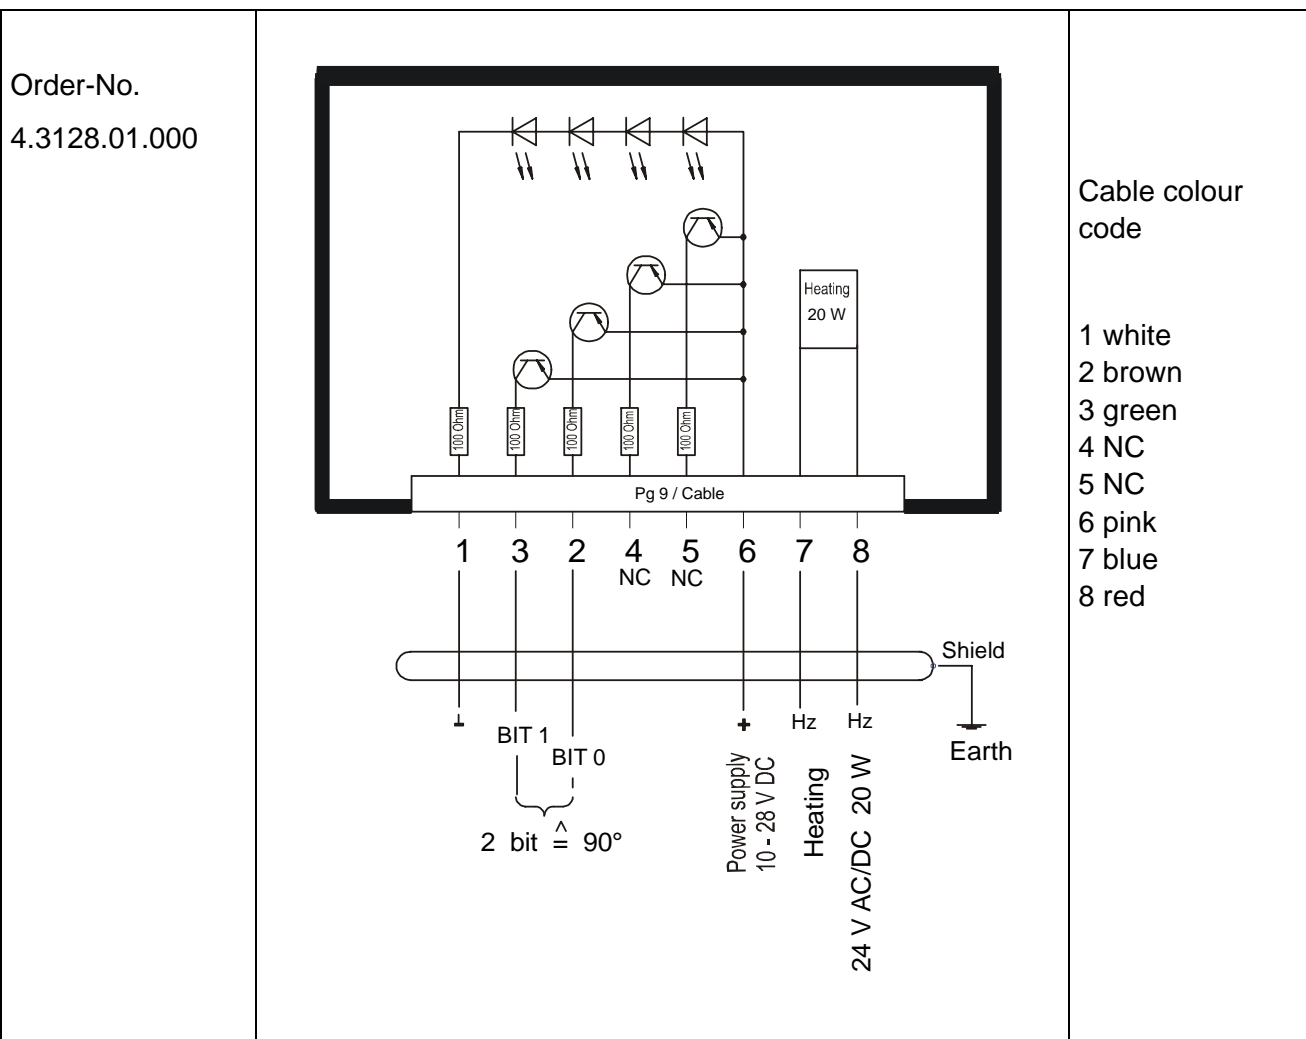

8 Technical Data

Characteristic	Description/ Value
Measuring range	0 – 360°
Resolution	90°
Accuracy	± 5°
Measuring principle	Opto-electronic
Output	2- Bit parallel Gray-Code
Electrical output	
Output signal	open collector (source)
Max. load	50 mA
Operating voltage	10 - 28 V DC
Operating voltage heating	24 V DC/AC, max. 20 W
Ambient temperature	- 30 °C ... + 70 °C
Survival speed	maximally 80 m/s, 30 minutes
Connection	See models available
Dimensions	See dimensional diagram
Mounting	For ex. onto a mast tube with receptacle thread PG 21 or boring Ø 29 mm
Protection	IP 55
Weight	app. 0.60 kg

9 Dimensional Drawing

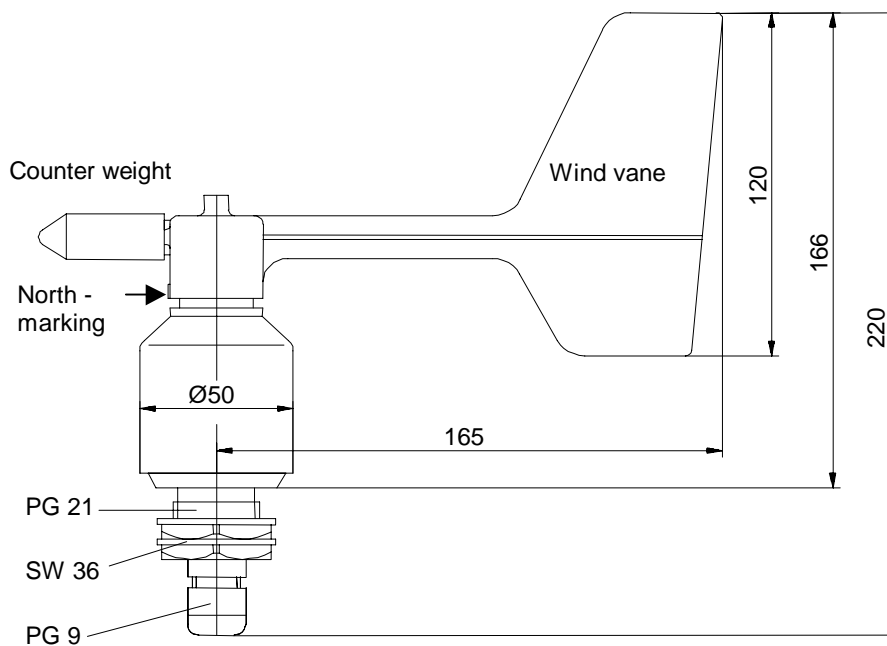


Figure 1: Dimensional Drawing: Wind direction transmitter

10 Accessories

The following accessories are available for the wind direction transmitter:

<p>Traverse</p> <p>For mounting the wind speed transmitter and wind direction transmitter <i>compact</i> jointly onto a mast.</p>	<p>4.3171.30.000</p> <p>4.3171.31.000</p>	<p>Clamping range: Ø 48 ... 102 mm</p> <p>Clamping range: Ø 116 ... 200 mm</p> <p>Sensor distance: 0,8 m</p> <p>Material: Aluminum</p>
<p>Traverse, short</p> <p>For mounting the wind direction transmitter <i>compact</i> onto a mast.</p>	<p>4.3171.40.000</p> <p>4.3171.41.000</p>	<p>Clamping range: Ø 48 ... 102 mm</p> <p>Clamping range: Ø 116 ... 200 mm</p> <p>Length: 0,4 m</p> <p>Material: Aluminum</p>
<p>Lightning rod</p> <p>For mounting the a.m. traverses</p>	<p>506351</p>	<p>Length: 0,56 m</p> <p>Material: stainless steel</p>

Please contact us for other accessories such as cables, power supply units, masts, as well as for additional mast- or system-constructions.



ADOLF THIES GmbH & Co. KG

Hauptstraße 76 37083 Göttingen Germany
P.O. Box 3536 + 3541 37025 Göttingen
Phone ++551 79001-0 Fax ++551 79001-65
www.thiesclima.com info@thiesclima.com



- Alterations reserved -