


Ultrasonic Anemometer 2D

Operating Instructions 4.3801.00.000

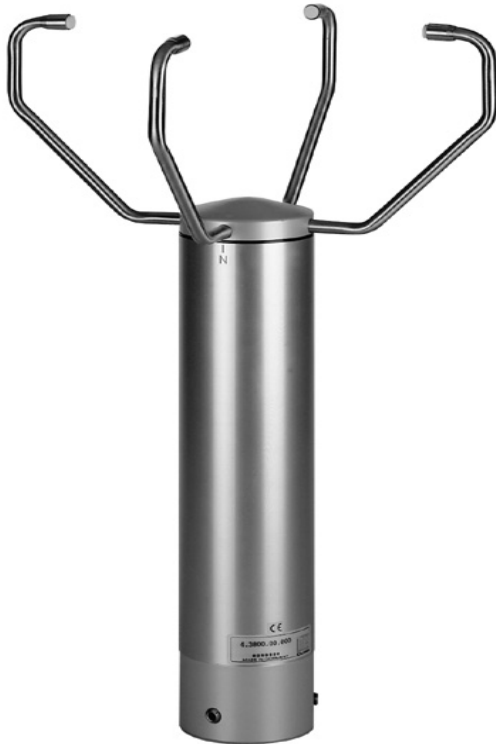

1. Range of Application

The Ultrasonic Anemometer 2D is designed to detect the horizontal components of wind speed and wind direction in two dimensions as well as the virtual temperature. Due to its very short measurement intervals, the instrument is ideal for the inertia-free measurement of gusts and peak values.

In certain weather situations the accuracy of the air temperature measurement (virtual-temperature) surpasses that one of the classic method where the temperature transmitter is used a weather and thermal radiation shield.

The measured data are available as analogue signals and as a data telegram via a serial interface. The ultrasonic transducers as well as its carrying arms are automatically heated so that the measuring results, in case of critical ambient temperatures, are not affected by icing rain or snow, and the risk of operation trouble, caused by icing, is minimized.

2. Mode of Operation

The **Ultrasonic Anemometer 2D** consists of 4 ultrasonic transducers, in pairs of 2 which are opposite each other at a distance of 200 mm.

The two measurement paths thus formed are vertical to each other.

The transformers act both as acoustic transmitters and acoustic receivers.

The respective measurement paths and their measurement direction are selected via the electronic control. When a measurement starts, a sequence of 4 individual measurements in all 4 directions of the measurement paths is carried out at maximum possible speed.

The measurement directions (acoustic propagation directions) rotate clockwise, first from south to north, then from west to east, from north to south and finally from east to west.

The mean values are formed from the 4 individual measurements of the path directions and used for further calculations.

A measurement sequence takes approx. 10 msec at +20°C.

3. Measurement Principle

3.1 Wind speed and direction

The speed of propagation of the sound in calm air is superposed by the speed components of an air flow in wind direction.


A wind speed component in the direction of the propagation of the sound supports the speed of propagation, thus leading to an increase in the speed. A wind speed component opposite to the direction of propagation, on the contrary, leads to a reduction of the speed of propagation.

The speed of propagation resulting from the superposition leads to different propagation times of the sound at different wind velocities and directions over a fixed measurement path.

As the speed of sound is very dependent on the air temperature, the propagation time of the sound is measured on both of the measurement paths in both directions. In this way, the influence of the temperature-dependent speed of sound on the measurement result can be eliminated.

By combining the two measuring paths which are at right angles to each other, one obtains the measurement results of the sum and the angle of the wind speed vector in the form of rectangular components.

After the rectangular speed components have been measured, they are then transformed by the μ -processor of the anemometer into polar co-ordinates and output as sum and angle of wind speed.

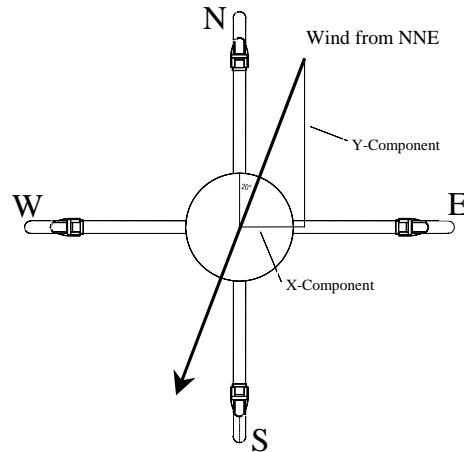

3.2 Acoustic-Virtual Temperature

As previously mentioned, the speed of the propagation of sound shows a radix dependency on the absolute air temperature, but is rather independent of air pressure, and only slightly dependent of humidity. Thus these physical properties of gases can be used to measure air temperature at constant and known chemical composition.

It is a measurement of gas temperature which is made without thermal coupling to a solid state sensor.

The advantages of this measured variable is, on the one hand, its inertia free reaction to the actual gas temperature, and, on the other hand, the avoidance of measurement errors such as those which occur when a solid state temperature sensor is heated up by radiation.

Due to the low dependency of the speed of propagation of the sound on the air humidity, the "Virtual Temperature" refers to dry air (0% humidity) under the same pressure conditions as that one actually measured.

The deviation of the measured "acoustic-virtual temperature", compared with the real air temperature, is linear-dependent from the absolute humidity content of the air.

The part of water vapour in the air increases proportionally the sonic speed, as H₂O-molecules have approx. only half of the mass of the remaining air-molecules (O₂ and N₂).

The rise of the sonic speed leads to an apparent (virtual) rising of the measured temperature in humid air compared with dry air of the same temperature.

The deviation of the measured virtual temperature in humid air, compared with real air temperature, can be corrected according to the following correlation, when the value of absolute humidity is given:

$$T_r = T_v - T_v * 0,135 \text{ K} * \text{m}^3 / \text{g} * H_{\text{abs}}$$

and T_r represents the real air temperature, T_v the measured acoustic-virtual temperature and H_{abs} the absolute humidity in grams H₂O per m³ of air.

The virtual temperature at 100 % is too high by approx. 2 Kelvin with an air temperature of 20°C.


4. Technical Data

Wind Speed	Measurement range	0...65 m/s
	Accuracy	± 0.1 m/s , at the range 0 ... 5 m/s resp. ± 2 % rms from measured value at > 5 m/s
	Resolution	0.1 m/s
Wind Direction	Meas. range	0...360°
	Accuracy	± 1.0°
	Resolution	1°
Virtual Temperature	Meas. range	- 40 + 70 °C
	Accuracy	± 0.5 K
	Resolution	0.1 K
Data output digital	Interface	RS 485 / RS 422
	Baud rate	1200, 2400, 4800, 9600, 19200 selectable
	Output	Instantaneous values of speed, direction and temperature Gliding mean values 1sec.; 10sec.; 1min.; 2min.; 10min.
General	Output rate	Spontaneous 1 per 100 msec up to 1 per 25.5 sec, selectable
	Status identification	On request, asynchronous or synchronous measurement
	Internal meas. rate	Heater status, path disturbance, δT temperature path to path
	Temp. range	400 measurements per second, at 25 °C
	Operating voltage	- 40 ... + 70 °C
	Protection	Supply 20...28 V _{rms} AC/DC, max. 70 VA Idling voltage when heating is switched-off: max. 32 V _{rms}
	Icing	IP 65
	Corrosion	according to THIES STD 012001
	EMV	No corrosion after 3 month of salt fog and condensation
	Model	EN 55022 5/95 class B; EN50082-2 2/96
Mounting	V4A Stainless steel for housing and sensor arms	
Type of connection	to a mast tube 1 ½", for ex. DIN 2441	
Weight	8 pole plug connector in the shaft	
		approx. 2.5 kg

5. Plug Connection Assignment

Pin-No.	Function	Remark
1 (A)	Selection Instr.-ID (Low active), bit 0	Pull up 10 K Ω intern
2 (B)	Selection Instr.-ID (Low active), bit 2	Pull up 10 K Ω intern.
3 (C)	TX- / RX- (Z) RS 485 / RS 422	Serial interface
4 (D)	Selection Instr.-ID (Low active), bit 1	Pull up 10 K Ω intern.
5 (E)	TX+ / RX+ (Y) RS 485 / RS 422	Serial interface
6 (F)	GND	Serial interface
7 (G)	Supply 20–28 VAC, nom. 24 VAC	Idling volt. 32 VAC
8 (H)	Supply 20–28 VAC, nom. 24 VAC	Idling volt. 32 VAC

Scale Drawing

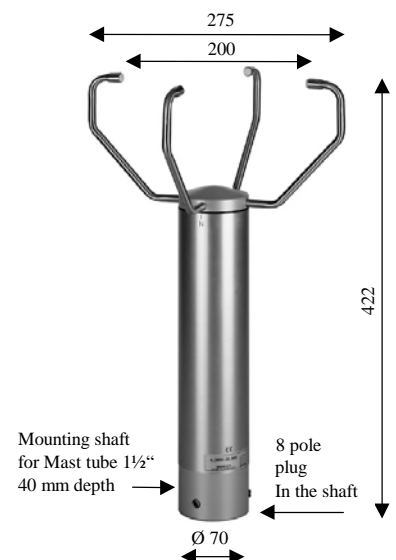

5.1 Hints for supplying the instrument:

The instrument must be supplied by 24 volts DC or AC_{rms}. In order to guarantee the complete heating power. In order to protect the heating winding the supply voltage must not exceed an absolute value of 28v ac or dc.

The maximum permissible idling voltage with switched-off heating is effectively 32 V DC or AC_{rms}.

6. Interface Description

6.1. Telegram „VESTAS“ ! I I V V V D D D S T T T B C R

CHARACT.NO	CHARACTER AVAILABLE	FUNCTION
1 (!)	!	Response character
2 (I)	0 ... 9	Identifier Characters
3 (I)	0 ... 9	Identifier characters
4 (V)	0 ... 9	Wind speed * 10 ¹ m/s
5 (V)	0 ... 9	Wind speed * 10 ⁰ m/s
6 (V)	0 ... 9	Wind speed * 10 ⁻¹ m/s
7 (D)	0 ... 9	Wind direction * 10 ² degree
8 (D)	0 ... 9	Wind direction * 10 ¹ degree
9 (D)	0 ... 9	Wind direction * 10 ⁰ degree
10 (S)	+ ... -	Sign
11 (T)	0 ... 9	Temperature * 10 ¹ °C
12 (T)	0 ... 9	Temperature * 10 ⁰ °C
13 (T)	0 ... 9	Temperature * 10 ⁻¹ °C
14 (B)	ASCII	Status byte, see item 6.2.2
15 (C)	ASCII	Check sum, see item 6.2.1

6.2 Definition of Checksum and Status byte

6.2.1 Forming of Checksum

The checksum is the result of the byte-wise EXOR-combination of the bytes in the telegram acc. following definitions.

CSTEMP = XOR-Combination of Bytes 1..13 starting with 0 (Character '!' is not part of the checksum)

Checksum = (High-Nibble(CSTEMP) XOR Low-Nibble(CSTEMP)) + ASCII(0)

6.2.2 Definition of Status Byte

The status byte contains information about the current state of the system.
The information comprises:

- error events with the measurement value acquisition
- a possible de-calibration caused, e.g., by a change in the measurement path length (due to mechanical deformation of the transducer carrying arms)
- the operation state of the instrument heating.

6.2.3 Structure of Status Byte

- Bit 0 0 = data valid 1 = data invalid
- Bit 1 temperature difference between X and Y measurement path (LSB)
- Bit 2 temperature difference between X and Y measurement path (MSB)
- Bit 3 Number of required measuring cycles for an error-free measurement value acquisition (LSB)
- Bit 4 Number of required measuring cycles for an error-free measurement value acquisition (MSB)
- Bit 5 Exceeding measuring range(counter overflow)
- Bit 6 Reserved
- Bit 7 0 = heating off 1 = heating on

6.2.4 Definition of Temperature Difference in Status Byte

Bit 2	Bit 1	Temperature difference x-path to y-path in Kelvin
0	0	0,0 K to 3,1 K
0	1	3,2 K to 6,3 K
1	0	6,4 K to 7,9 K
1	1	≥ 8,0 K → invalid measurement

6.2.5 Definition of required measuring cycles in Status Byte

Bit 4	Bit 3	Number of required measuring cycles
0	0	= 16 measuring cycles
0	1	16 < measuring cycles < 32
1	0	32 < measuring cycles < 64
1	1	≥ 64 measuring cycles, invalid measurement

7. Averaging Procedure:

The Ultrasonic 2D forms the gliding mean value through a FIFO-memory the capacity of which comprises up to 600 values.

In the free running measurement mode the measurement data rate is exactly 10 Hz or 100msec, and forms, at the same time, the updating rate for the averaging memory (FIFO-memory).

If averaging is requested the measured data are recorded in the FIFO-memory stated above, the capacity of which is built-up depending on the selected averaging period.

If the averaging period is, for example, 10 seconds, 100 memory cells are used, and in case of an averaging period of 1 minute 600 cells.

From a selected averaging period > 1 minute up the data flow will be pre-averaged; because the memory capacity of 600 values cannot be exceeded.

The Ultrasonic 2 D combines two different and useful procedures of mean value forming:

- The forming of vectorial mean values
- The forming of scalar mean values

These different procedures can be selected for the averaging of both the wind speed and wind direction, depending on the application.

The procedure of forming the vectorial mean value takes the wind direction into account when averaging the wind speed and vice versa.

Thus, the averaged dimensions of wind speed and wind direction are valued each one with the other.

This procedure of forming the mean value is well suited, for example, for measurements and analysis of pollutant-propagation.

The procedure of forming the scalar mean value averages both dimensions of wind speed and wind direction independently from each other.

These averaging procedures lead to results comparable with mechanical wind speed- and wind direction transmitters.

The scalar averaging procedure is suited, for example, for location-analysis for wind power plants, where only the dimension of the wind vector – important for power generation – is interesting but not its direction.

The vectorial and scalar procedure can be used independently with wind speed and wind direction within an output telegram.

For this, you have to select one of the four possible combinations through the command **AM (Average Method)**.

Command for selecting the averaging procedure:

AM00000 (Average Method) vectorial averaging of speed and direction

AM00001 scalar averaging of speed and direction

AM00002 scalar averaging of speed and vectorial averaging of direction

AM00003 vectorial averaging of speed and scalar averaging of direction

8. Bus-Ability, Synchronisation of the Measurement on the Query Telegram:

8.1 Bus-Ability

The Ultrasonic supports absolutely any operation at an RS485/RS422 data bus in co-operation with further instruments (bus operation).

The line drivers of the ultrasonic are contemporarily active only for each transmission-period of the instrument.

The remaining time the line drivers are off-line ("three-state-mode").

The direct connection to a PC with RS232 interface makes an interface-converter RS 485 / RS 232 necessary, e.g. our accessories order-no. 9.1702.20.000

In case of bus operation respond only those instruments with instrument-specific "ID" on request of the bus masters

Spontaneous telegram output by selecting a respective telegram type (TT0000x) is suppressed when semi-duplex operation is set, as this could lead to a blocking of the receivers at slow baud rates.

8.2 Synchronisation on Data Query

Certain application make it necessary to interrogate cyclically a collective of instruments within a short time (e.g. 5 instruments within 100 ms).

There might be the following problem: the Ultrasonic can be contacted during a measurement by the asynchronous query and is then not ready for transmission.

In order to guarantee an immediate instrument response without delay, the possibility of temporal measurement synchronisation on the query is used.

In case the instrument receives, with active synchronisation, a telegram inquiry through the command TR0000x, and further inquiry follow with intervals of less than 2,5 seconds, the instrument runs synchronously to the inquiries and responds with smallest possible delay.

If there are no queries for more than 2,5 seconds, the instrument leaves the synchronous mode and changes into a spontaneous measurement value acquisition.

This return to the spontaneous mode of measurement guarantees that all control functions derived from the measurement data (e.g. switch-on heating etc.) will be able to operate also in case of a failure of query telegram.

As soon as a new query occurs in the spontaneous mode the instrument synchronises immediately on the query telegram.

8.3 Averaging with Active Synchronisation

In case the measurement values should be averaged please take care that – with active synchronisation – the exact, internal time basis of 100 ms for forming the measurement values is not used. In this case, the time is determined by the query-repetition-rate.

9. List of control commands

The Anemometer 2D can be controlled via its serial data interface using the commands in the following list. Any standard terminal program such as "procomm" , "telix" or a *Windows* terminal program (e.g. "*Hyper Terminal*") can be used.

All adjustments are stored in a E²ROM so that the adjusted parameters cannot get lost after switching off or failure of power supply.

9.1 List of commands

Command	Function	Remark
<ID> AM 00000	Vectorial averaging	Vectorial averaging of wind speed and direction
<ID> AM 00001	Scalar averaging	Scalar averaging of wind speed and direction
<ID> AM 00002	Scalar / vectorial averaging	Scalar averaging of speed / vectorial averaging of direction
<ID> AM 00003	Vectorial / Scalar averaging	Vectorial averaging of speed / scalar averaging of direction
<ID> AV 00000	Instantaneous value	Output of the instantaneous values
<ID> AV 00001	Mean value over 1 second	Output of the gliding mean value over 1 second
<ID> AV 00002	Mean value over 10 seconds	Output of the gliding mean value over 10 seconds
<ID> AV 00003	Mean value over 1 minute	Output of the gliding mean value over 1 minute
<ID> AV 00004	Mean value over 2 minutes	Output of the gliding mean value over 2 minutes
<ID> AV 00005	Mean value over 10 minutes	Output of the gliding mean value over 10 minutes
<ID> BR 00002	1200 Baud N 8 1	Data rate 1200 Baud, 8 Data bits, No Parity, 1 Stop bit
<ID> BR 00010	1200 Baud E 7 1	Data rate 1200 Baud, 7 Data bits, Parity Even, 1 Stop bit
<ID> BR 00003	2400 Baud N 8 1	Data rate 2400 Baud, 8 Data bits, No Parity, 1 Stop bit
<ID> BR 00011	2400 Baud E 7 1	Data rate 2400 Baud, 7 Data bits, Parity Even, 1 Stop bit
<ID> BR 00004	4800 Baud N 8 1	Data rate 4800 Baud, 8 Data bits, No Parity, 1 Stop bit
<ID> BR 00012	4800 Baud E 7 1	Data rate 4800 Baud, 7 Data bits, Parity Even, 1 Stop bit
<ID> BR 00005	9600 Baud N 8 1	Data rate 9600 Baud, 8 Data bits, No Parity, 1 Stop bit
<ID> BR 00013	9600 Baud E 7 1	Data rate 9600 Baud, 7 Data bits, Parity Even, 1 Stop bit
<ID> BR 00006	19200 Baud N 8 1	Data rate 19200 Baud, 8 Data bits, No Parity, 1 Stop bit
<ID> BR 00014	19200 Baud E 7 1	Data rate 19200 Baud, 7 Data bits, Parity Even, 1 Stop bit
<ID> DV	Device version request	Query of the software version of the instrument
<ID> ES 00000	Sign-echo switched off	Echo operation of transmitted characters (to Sonic) switched off
<ID> ES 00001	Sign-echo switched on	Echo operation of transmitted characters switched on
<ID> HT 00000	Heating locked	Switching on of heating suppressed
<ID> HT 00001	Heating energised	Heating operation possible
<ID> KY 00000	Key, no access	Software-key, access to EEPROM closed
<ID> KY 00001	Key, open access	Software-key, access to EEPROM open
<ID> NC 00xxx	North correction in 1° units	Input of north correction, value range 00000 up to 00360
<ID> OS 00000	Wind speed in m/s	Scale of Wind speed in meter per second
<ID> OS 00001	Wind speed in Km/h	Scaling of Wind speed in kilo meter per hour
<ID> OS 00002	Wind speed in mph	Scaling of Wind speed in miles per hour
<ID> OS 00003	Wind speed in Knots	Scaling of Wind speed in knots (nautically)
<ID> SH	Serial number "High Word"	Query of serial number, upper 4 characters
<ID> SL	Serial number "Low Word"	Query of serial number, lower 4 characters
<ID> SV	Software version, SW-Date, Hardware version, SH, SL	Query of software version, of the date of making out the software, of hardware version, of serial number high word and low word
<ID> TR 00009	VESTAS Telegram	Output of VESTAS telegram on request

9.2 Command Input

Please find your ID (identifier-number) in the works certificate included in the delivery.
For the input of commands and parameters please open first the access to the EEPROM by entering the command (ID) KY00001.

After all inputs have been made the access to the EEPROM should be locked again through the command (ID) KY00000 in order to avoid unauthorised changes of the system parameters.

The command is input by entering the instrument identification number (ID) followed by two letters which specify the actual command followed by a 5-digit code number respective value.

The characters are entered **without a space** and are **activated with Return**.

All letters must be **capitalised**, otherwise they will not be accepted.

Correcting the command word during input when an error has occurred is **not allowed** and the command will not be **accepted**.

Entering the command without the 5-digit code number is interpreted as a query of the command status and leads to the output of the current command status.

Example : Correcting an angle of displacement while setting up the anemometer by entering a corrective angle:

Instrument ID is accepted as 12. The necessary angular correction is 47°. The angle stored in the system up to that time was 15°. Attention: Input and representation in units of 1°.

The correction angle is added clockwise to the measured wind direction angle.

First, opening of the EE-prom access:

Input into the system: 12KY00001	response of the system: user access
Input into the system: 12NC	response of the system: !12NC00015
Input into the system: 12NC00047	response of the system: !12NC00047
Input into the system: 12KY00000	response of the system: protect

The system verifies the accepted input and displays the set value.

Attention: After the supply voltage of the instrument has been switched on or switched off the locking is automatically activated.

The **ID-number** selects the requested instrument.

10. Preparation for Use

10.1 Selecting the Site

As already described above the ultrasonic anemometer transmits sonic bursts which are necessary for the measurement of the propagation speed. If these **sonic bursts** hit a well sonic-reflecting surface they are reflected as echo and might cause **error measurements** – under unfavourable conditions.

It is, therefore, advisable to install the US-anemometer with a **minimum distance of 1 meter to objects in the measurement area.**

In general wind measurement instruments should be able to detect the wind conditions over a wide area. In order to obtain comparative values when determining the surface wind, measurements should be taken at a height of 10 meters above a plane, unobstructed area. An unobstructed area is one where the distance between the wind transmitter and any obstacle is at least 10 times greater than the height of the obstacle. (s. VDI (German Engineers Association) 3786). If this requirement cannot be fulfilled, then the wind measurement instrument should be set up at a height where the measured values are not influenced by any local obstacles (approx. 6-10 m above the level of the obstacle). The anemometer should be set up in the center of flat roofs, not at the edge in order to avoid possible preferred directions.

10.2 Mounting the wind transmitter

The wind transmitter can be mounted to a pipe piece of R 1 ½" (Ø 48.3 mm) which is 50 mm long. The internal diameter of the pipe must be at least 40 mm as the wind transmitter is connected electrically from below with a plug. Solder a flexible control line LiYCY with the corresponding number of cores to the enclosed plug. After the wind transmitter has been connected, set it onto the pipe piece respectively the mast piece. The branch of the red marked sonic transducer must be aligned to North. To do this, take a bearing via the ultrasonic transducer of the North/South path onto an object to the North, for example a building or a special geographic feature. Use the four screws with hexagonal recessed holes (SW 4 mm) to attach the instrument to the shaft.

Note : When using a lightning rod please take care that it is mounted always in an angle of 45° to the measuring distance, as otherwise there might be deviations of measuring value.

10.3 North Alignment

For the alignment of the anemometer the **branch of the red marked sonic transducer must indicate to North**. For this, you select an obvious point in a northerly or southerly direction in the surroundings with the aid of a compass; then turn the mast or the anemometer into this direction until both arms opposite are situated in a straight line.

It is also possible that oneself stands in a northerly or southerly direction with respective distance, and a partner turns the anemometer or mast by command until both sensor arms are situated in a straight line.

In this case, it is advisable to use a pair of field glasses.

11. Accessories

Connecting cable, complete	506 702	15 m cable with connecting plug at the sensor, the other end open
PC Software Meteo-Online	9.1700.98.000	For graphic visualization of measured values on PC screen
Power Supply Unit	9.3388.00.000	For the power supply of the Ultrasonic Anemometer
Interface converter	9.1702.20.000	For signal conversion of interface
Lightning Rod	4.3100.99.150	For lightning protection

12. Maintenance

As the instrument has no moving parts i.e. operates without wear or tear, only minimal maintenance is required. As the sensor surface is permanently washed up by the falling rain it is only occasionally necessary to clean the surface with non-aggressive cleansing agent and soft cloth. These cleansing activities can be carried out – as far as necessary – on occasion of the routine checks.

13. Calibration

The ultrasonic anemometer does not contain any adjustable components such as electrical or mechanical trimming elements. All of the components and materials are invariant in time. Thus, regular calibration because of ageing is not required. Only a mechanical deformation of the transformer arms and the resulting changes in the length of the measurement paths lead to errors in the measured values.

The virtual temperature can be used to check the length of the measurement path. A change in the measurement path length of 0.17% and consequently a measurement error of 0.17% of the wind speed corresponds to a 1 K deviation of the virtual temperature at 20 °C, thus at 6 K deviation, the measurement error of wind speed is approx. 1%.

If the distance of measuring path of the anemometer is de-aligned please contact the producer for a re-calibration of the instrument.

14. Warranty

Damages resulting from improper handling or caused by external influences, e.g. lightning, are excluded from the warranty. The warranty expires if the instrument has been opened.

Attention :

A return of the instruments must be effected in the original packing as otherwise the guarantee expires in case of mechanical damages e.g. by deformation of the transducer arms.

	ADOLF THIES GmbH & Co. KG		
	Hauptstraße 76 37083 Göttingen Germany P.O. Box 3536 + 3541 37025 Göttingen Phone ++551 79001-0 Fax ++551 79001-65 www.thiesclima.com info@thiesclima.com		

- Alterations reserved -